



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**PEUGEOT**

MOD.

**406**

YEAR.

**01** →

PETROL   
DIESEL

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the engine compartment on the support located on the left of the shock absorber column, driver's side.
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules under the dashboard, driver's side.
<b>POWER SUPPLY</b>	+ <b>30</b> : connect to the 3 mm <sup>2</sup> GREY wire located in the wiring harness coming out of the 2 way grey connector of the BSI central unit. - <b>31</b> : connect directly to the car body.
<b>IGNITION WIRE</b>	+ <b>15/54</b> : connect to the VIOLET wire at the position nr. 22 of the 26 way light blue connector of the BSI central unit.
<b>DIRECTION INDICATORS</b>	Connect to the wires at the positions nr. 14 and nr. 15 of the 16 way black connector of the BSI operating central.
<b>ELECTRIC WINDOWS</b>	<b>Positive control signal</b> <b>Front window, driver's side:</b> Give a 12s positive pulse to the wire located at the position nr.12 in the 16 way black connector of the push-button panel inside the driver's side armrest. <b>Front window, passenger's side:</b> cut the 2 mm <sup>2</sup> GREY wire located at the position nr. 10 of the 16 way black connector of the push-button panel inside the driver's side armrest. <b>Rear window, driver's side:</b> Cut the 2 mm <sup>2</sup> VIOLET wire located at the position nr. 7 of the 16 way black connector of the push-button panel inside the driver's side armrest. <b>Rear window, passenger's side:</b> cut the 2 mm <sup>2</sup> GREY wire at the position nr. 6 of the 16 way black connector of the push-button panel inside the driver's side armrest.
<b>CENTRAL DOORS LOCKING</b>	<b>Negative control signal</b> Refer to the <b>diagram nr. 88</b> for the antithefts of the Bridge serie. Refer to the <b>diagram nr. 88A</b> for the antithefts of the 3100 serie.
<b>IMMOBILISATION POINT</b>	<b>Gasoil pump</b> Cut the wire marked nr. 121 located at the position nr. 13 of the 23 way grey round connector placed in the upper part of the BSI central unit.
<b>STARTER</b>	+ <b>50</b> : Cut the activation control wire of the relay of the starting motor located in the wiring harness coming out of the connector of the ignition key.
<b>BONNET SWITCH</b>	Install an additional switch on the headlamp support plate, driver's side.
<b>DOORS SWITCH</b>	Connect to the GREEN wire located at the position nr. 16 of the 26 way light blue connector of the BSI operating central.
<b>BOOT SWITCH</b>	Connect to the wire marked nr. 319 directly in the wiring harness coming out of the boot lamp.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°88

Diagram to make the central locking on  
**PEUGEOT 206-406-406 coupè-RANCH**  
(for Bridge serie antithefts)

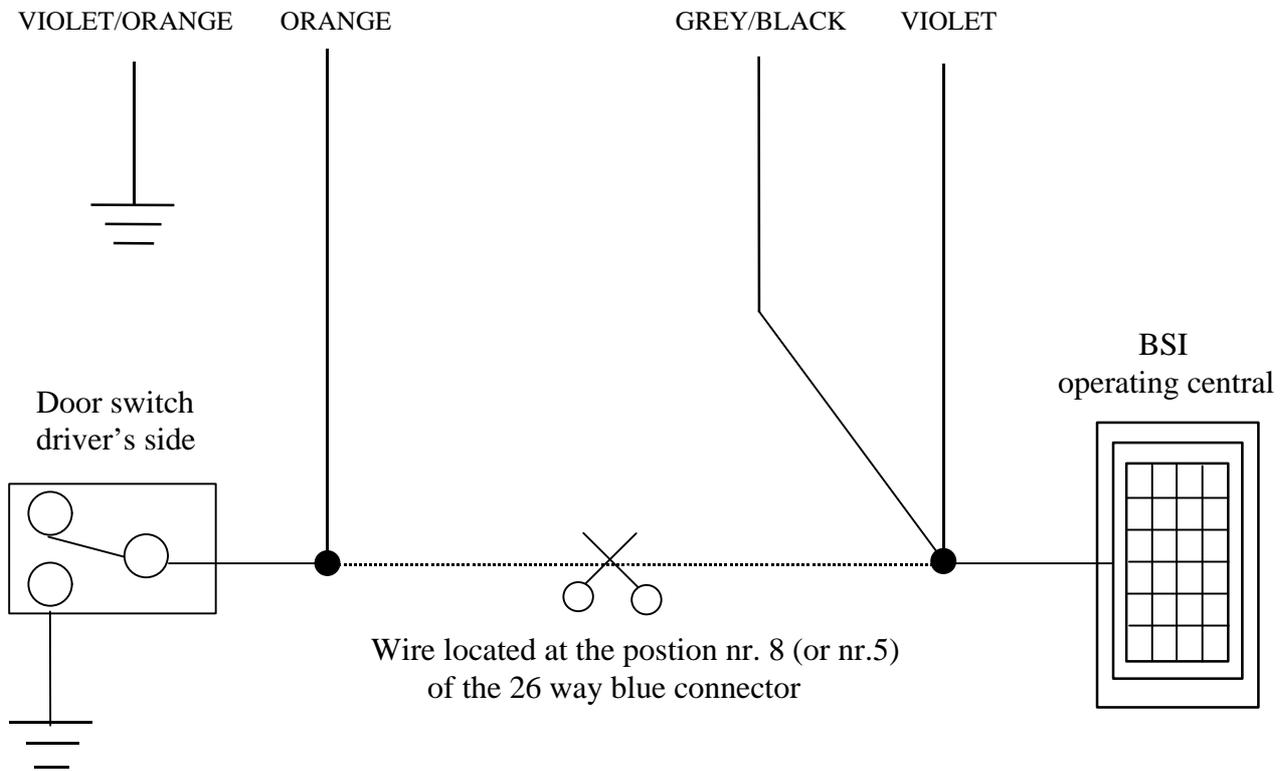

**The BSI operating central is located under the driver's side fuse box.**



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°88A

Diagram to make the central locking on  
**PEUGEOT 206-406-406 coupè-RANCH**  
(for 3100 serie antithefts)

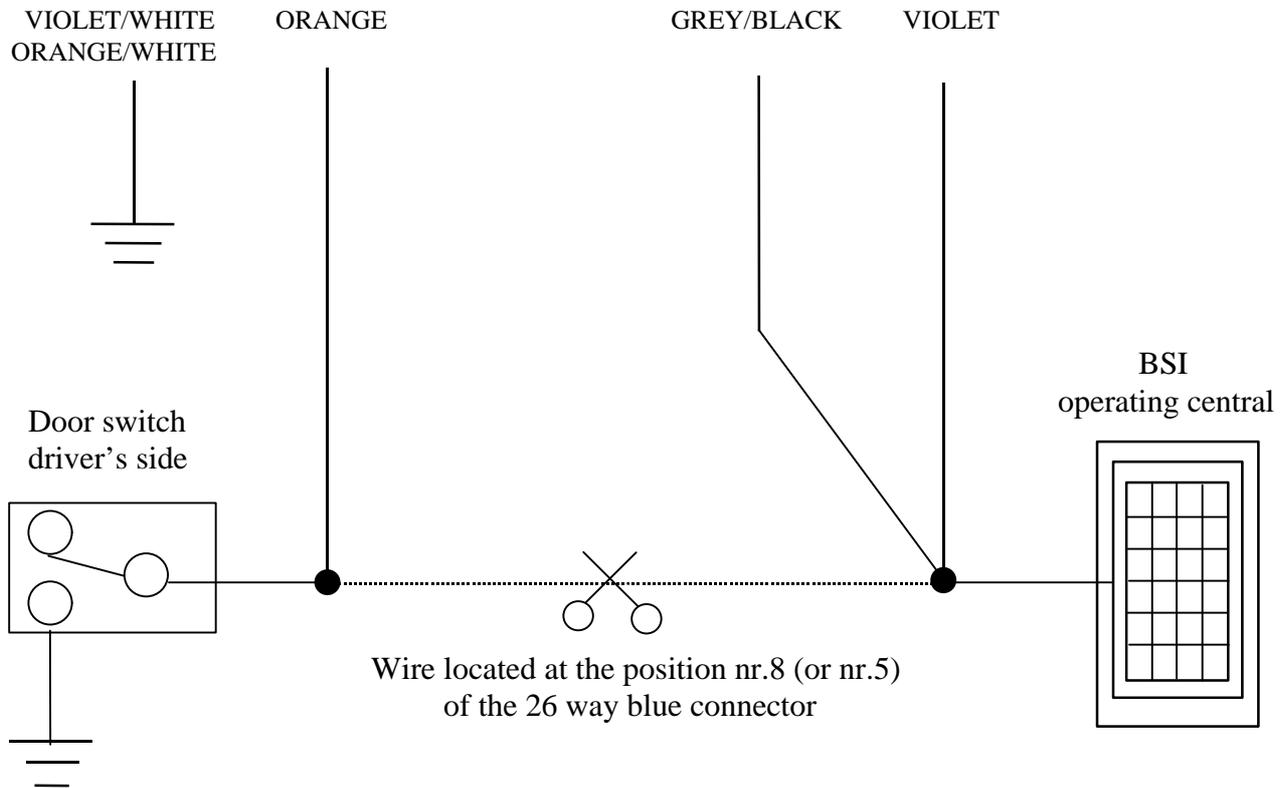

**The BSI operating central is located under the driver's side fuse box.**