



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

PEUGEOT

MOD.

406

YEAR.

02 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the dome of the shock absorber, passenger's side.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, driver's side.

POWER SUPPLY

+ 30: connect to the 3 mm² RED wire located at the entrance of the fuse box.
- 31: connect to one of the original ground terminals located on the right of the BSI operating central..

IGNITION WIRE

+ 15/54: connect to the wire at the position nr. 16 coming out of the 26 way blue connector of the BSI operating central.

DIRECTION INDICATORS

Connect to the wires at the positions nr. 13 and nr. 14 of the 16 way black connector coming out of the BSI operating central.

ELECTRIC WINDOWS

Positive control signal
Front window, driver's side:
Refer to the **diagram nr. 114.**
Front window, passenger's side:
Cut the 1 mm² GREY wire located at the position nr. 10.
Rear window, driver's side:
Cut the 1 mm² VIOLET wire located at the position nr. 7.
Rear window, passenger's side:
Cut the 1 mm² GREY wire located at the position nr. 6.
These connections are made directly in the 16 way black connector coming out of the push-button panel in the armrest of the driver's side door.

CENTRAL DOORS LOCKING

Door original motor direct signal
For the Bridge serie antithefts refer to the **diagram nr. 100**; for the 3100 serie antithefts refer to the **diagram nr. 100A.**

IMMOBILISATION POINT

Fuel pump
Cut the WHITE wire located behind the left lateral bulkhead, driver's side.

STARTER

+ 50: Cut the BLUE wire located in the wiring harness coming out of the 3 way connector, on the left of the steering column.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH

Connect to the wire, at the position nr. 14 coming out of the 26 way blue connector of the BSI operating central.
Note: The lamp polarity is positive.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 100

Diagram to make the lock and unlock of the doors on
PEUGEOT 406 year 2002
(for Bridge serie antithefts)

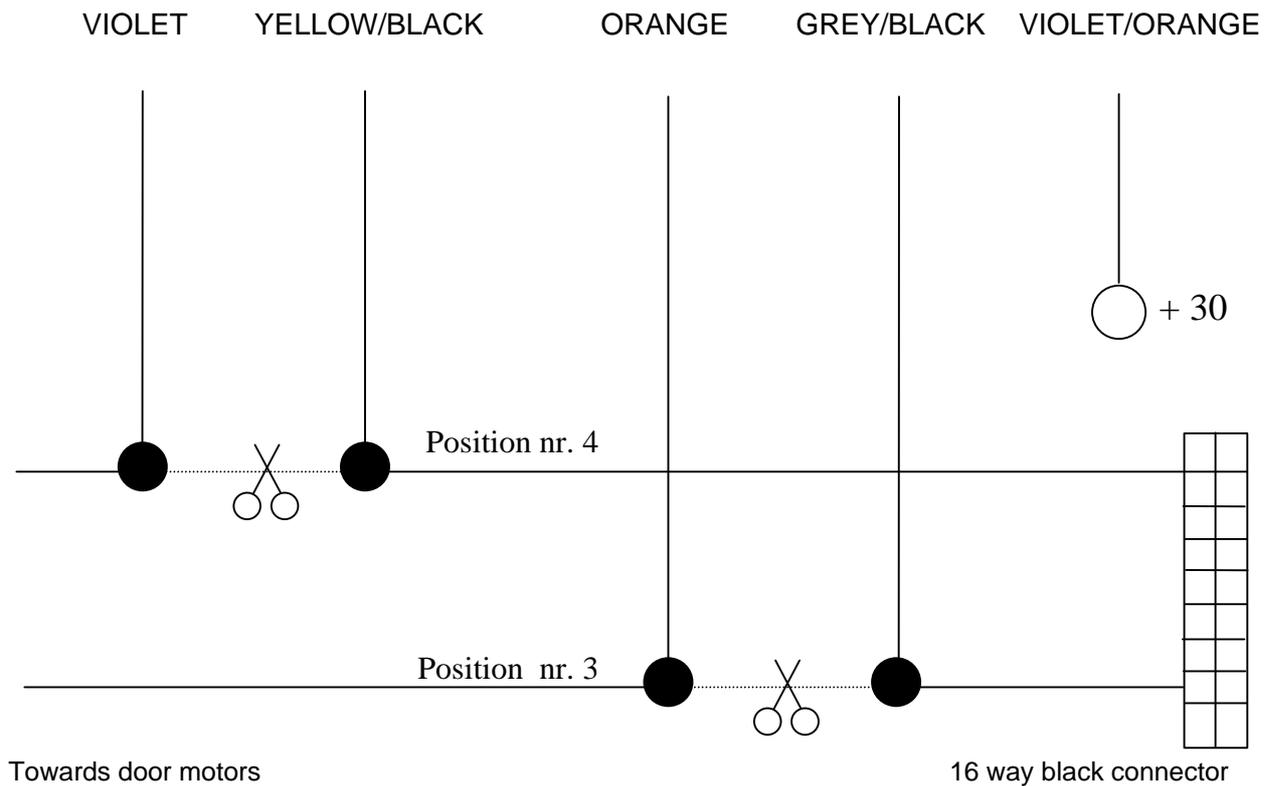



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 100A

Diagram to make the lock and unlock of the doors on
PEUGEOT 406 year 2002
(for 3100 antithefts)

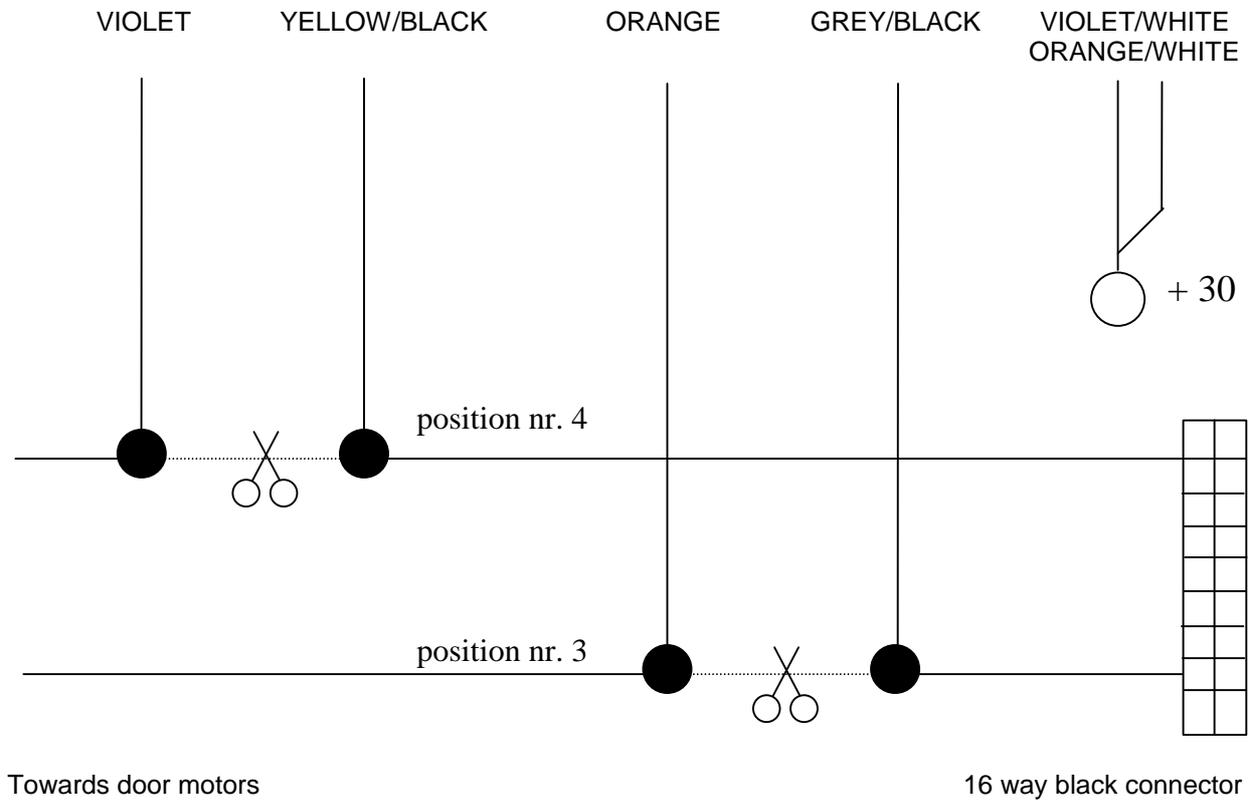



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 114

Diagram for windows connection on
PEUGEOT 406 year 2002

Diagram for windows locking using the BROWN/WHITE wire of the autodriven Bridge serie antithefts.

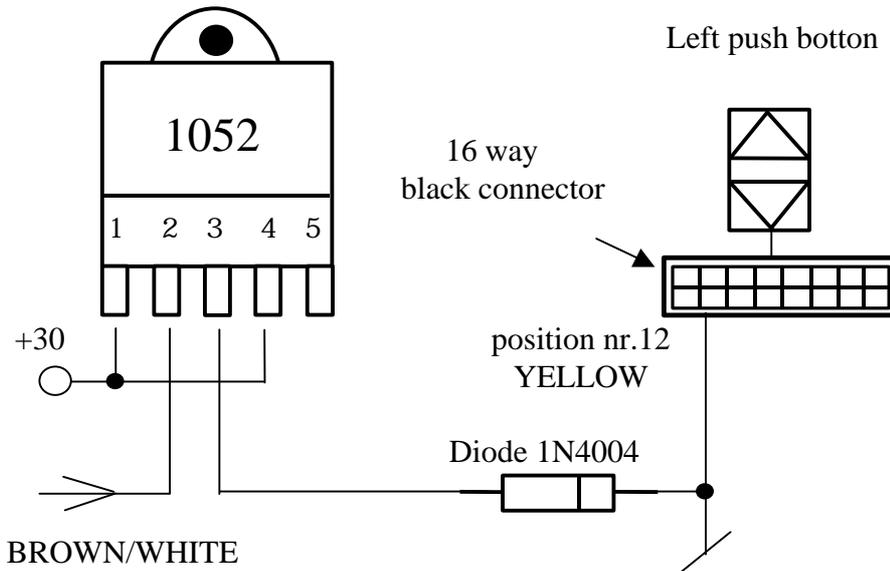


Diagram for windows locking using the BROWN wire of the no autodriven Bridge serie, 3100 and 3800 antithefts.

