



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **PEUGEOT** MOD. **807*** YEAR **03** → PETROL DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION	Position the compact alarms and the sirens in the driver's side windshield wiper.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.
POWER SUPPLY	+30: connect to the PINK wire in the 3 way blue connector coming out of the ignition key. -31: connect to the original ground socket located behind the left lateral bulkhead, driver's side.
IGNITION WIRE	+15/54: connect to the YELLOW wire in the 3 way blue connector coming out of the ignition key.
DIRECTION INDICATORS	Connect to the wires at the positions nr.13 and nr.14 located in the 16 way black connector in the fuse box.
ELECTRIC WINDOWS	This information is not available at the moment.
ACTIVAT./DEACTIVATION CONTROLS	Connections antitheft/vehicle Refer to the fitting diagram nr.180.
IMMOBILISATION POINT	Fuel pump Cut the ORANGE wire at the position nr.16 in the 16 way black connector located in the right fuse holder box, in the engine compartment.
STARTER	+50: Cut the RED wire in the 3 way blue connector coming out of the ignition key.
BONNET SWITCH	Install an additional switch on the headlamp support plate, near the bonnet bumper rubber.
DOORS SWITCH	Connect to the wire at the position nr.32 coming out of the 40 way connector with white cover, in the BSI central, in the fuse box. NOTE: this is a positive control.
BOOT SWITCH	Connect to the LIGHT BLUE wire at the position nr.16, in the wiring harness coming out of the 40 way grey connector, in the fuse box.

