

## CAR SECURITY

## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

www.cobra.it

REV. 00

	от	MOD.	BOXER	YEAR	<b>02</b> ightarrow	PETROL DIESEL	□ x	
ALARM/SIREN POSITION	Position the compact alarms and the sirens on the driver's side wheelhouse.							
CENTRAL UNIT POSITION	The modular systems and the modules should be positioned under the dashboard, on the side of the steering column.							
POWER SUPPLY	<ul> <li>+30: connect to the RED wire located in the wiring harness coming out of the connector of the ignition key.</li> <li>- 31: connect to a ground terminal located under the driver's side dashboard.</li> </ul>							
IGNITION WIRE		<b>+15/54:</b> connect to the ORANGE wire located in the wiring harness coming out of the 8 way white connector placed near the lights switch.						
DIRECTION INDICATORS		Connect to the LIGHT BLUE and LIGHT BLUE/BLACK wires in the 8 way white connector located near the lights switch.						
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the GREY wire coming out of the push button of the driver's side door. Front window, passenger's side: cut the RED/WHITE wire coming out of the driver's side door.							
CENTRAL DOORS LOCKING	<b>Motor direct control</b> Cut the LIGHT BLUE/GREY wire (unlock) and the LIGHT BLUE/WHITE wire (lock), in the wiring harness coming out of the flying red connector, on the left of the steering column. For the Bridge serie antithefts refer to the <b>A section</b> of the <b>diagram nr. 145.</b> For the 3100 and 3900 series antithefts refer to the <b>B section</b> of the <b>diagram nr. 145.</b>							
IMMOBILISATION POINT 1	<b>Under key relay pump</b> Cut the ORANGE wire in the wiring harness coming out of the connector of the ignition key.							
IMMOBILISATION POINT 2	<b>Gasoil pump</b> Cut the LIGHT BLUE/WHITE wire in the wiring harness coming out of the gasoil pump, in the engine compartment, above the driver's side wheelhouse.							
STARTER	+50: Cut the RED/BLACK wire located in the wiring harness coming out of the ignition key.							
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.							
DOORS SWITCH	Connect to the WHITE/BLACK wire located in the wiring harness coming out of the 2 way connector, behind the driver's side lateral side.							

