



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	RENAULT	MOD.	SCENIC	YEAR	99 →	PETROL	<input type="checkbox"/>	DIESEL	<input checked="" type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens on the right of the bulkhead that divides the engine compartment from the passenger's compartment. To pass the cables make a hole near the shock absorber, driver's side.								
CENTRAL UNIT POSITION	The modular systems and the modules should be positioned under the dashboard, driver's side.								
POWER SUPPLY	+ 30: connect to the RED/BLACK wire located at the position nr. 1 of the connector marked PP5 in the fuse box. - 31: connect with a terminal directly to the car body.								
IGNITION WIRE	+ 15/54: connect to the YELLOW/VIOLET wire located at the position nr. 3 of the connector marked PP1 in the fuse box.								
DIRECTION INDICATORS	Negative control signal The blinking of the direction indicators lights (on/off) is already installed on the vehicle. To obtain the blinking during the 30" when the alarm is going on, it is necessary to connect the WHITE/RED wire of the antitheft system (adjusted as "alternating output on alarm") to the VIOLET wire located at the position nr. 3 of the connector marked PE4.								
ELECTRIC WINDOWS	Negative control signal (ref. to the "C" 1980+1052 diagram) Front window, driver's side: Cut the 1,5mm ² WHITE wire. Front window, passenger's side: Cut the 1,5mm ² BROWN wire. Connections must be done directly on the coming out of the respective control switches.								
CENTRAL DOORS LOCKING	Negative control signal Connect to the VIOLET wire at the position nr. 5 (lock) and PINK wire at the position nr. 6 (unlock) located in the connector marked PE4 in the fuse box.								
IMMOBILISATION POINT	Relay pump Cut the 2,5 mm ² YELLOW wire located in the wiring harness coming out of the "NEIMANN" central.								
STARTER	+50 : Cut the 2,5mm ² WHITE wire located in the wiring harness coming out of the "NEIMANN" central.								
BONNET SWITCH	Install an additional switch on the front headlamp plate, above the headlamp, driver's side.								
DOORS SWITCH	Connect to the GREY wire located at the position nr. 8 of the connector marked PE4 in the fuse box								
BOOT SWITCH	Connect to the BROWN wire located at the position nr. 9 of the connector marked PE4 in the fuse box.								