



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

RENAULT

MOD.

TWINGO

YEAR

00 →

PETROL

DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the left in the engine compartment. Pass the cables through the original rubber sleeve located above the pump of the servobrake, on the left in the engine compartment.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, driver's side.

POWER SUPPLY

+ **30**: connect to the wire at the position A9 in the blue connector coming out of the central doors locking unit, on the left of the dashboard, driver's side.
- **31**: connect to the wire at the position A8 in the blue connector coming out of the central doors locking unit, on the left of the dashboard, driver's side.

IGNITION WIRE

+ **15/54**: connect to the wire at the position A7 of the blue connector coming out of the central doors locking unit, on the left of the dashboard, driver's side.

DIRECTION INDICATORS

Connect to the wires coming out directly from the connector of the switch for the activation of the emergency indicators.

ELECTRIC WINDOWS

Controls with mixed polarity

Front window, driver's side:

cut the WHITE/GREEN wire at the position nr. 1 of the connector coming out of the control switch.

Front window, passenger's side:

cut the WHITE and BROWN wires located in the wiring harness behind the driver's side loudspeaker.

CENTRAL DOORS LOCKING

Negative control signal

Connect both the lock and unlock controls to the wire at the position B5 of the blue connector coming out of the central doors locking unit located on the left of the driver's side dashboard.

IMMOBILISATION POINT

Gasoil pump

Cut the 2 mm² WHITE wire at the position 7B of the connector coming out of the relè fuel pump located inside the black plastic box on the battery side.

STARTER

+**50**: Cut the ORANGE wire in the wiring harness coming out of the connector of the ignition key.

BONNET SWITCH

Install an additional switch on the headlamp support plate, near the left lateral lamp.

DOORS AND BOOT SWITCH

Connect to the BROWN/BLUE wire located in the black connector in the front part of the fuse box.