



## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

**REV. 00**

www.cobra.it

<b>MAKE</b>	<b>ROVER</b>	<b>MOD.</b>	<b>75*</b>	<b>YEAR</b>	<b>03</b> →	<b>PETROL</b> <input type="checkbox"/>
						<b>DIESEL</b> <input checked="" type="checkbox"/>

\* Models with original equipment keyless entry system

- ALARM/SIREN POSITION**                      Position the compact alarms and the sirens on the shock absorber, passenger's side. To pass the cables use the original rubber core hitch located in the bulkhead that divides the engine compartment from the passenger's compartment.
- CENTRAL UNIT POSITION**                      Position the modular systems and the modules behind the passenger's side glove compartment.
- POWER SUPPLY**                              **+ 30:** Connect to the big wire located at the entrance of the fuse box.  
**- 31:** Connect, by means of a cable terminal, directly to the car body.
- IGNITION WIRE**                              **+ 15/54:** Connect to the GREEN/BLACK wire at the position nr.30 of the 54 way light blue connector coming out of the black central located in the superior part, behind the passenger's side glove compartment.
- DIRECTION INDICATORS**                      Connect to the following wires disjoining the lines by means of 6 diodes: GREEN/ORANGE position nr.18, GREEN/LIGHT PINK position nr.1, GREEN/RED position nr.50 for the left side line and GREEN/WHITE position nr.19, LIGHT GREEN position nr.3, GREEN/GREY position nr.43 for the right side line. All the above wires are located in the wiring harness coming out of the connector of the switch lights.
- ELECTRIC WINDOWS**                              **Positive control signal**  
**Front window, driver's side:**  
cut the GREY/YELLOW wire located at the position nr.16.  
**Front window, passenger's side:**  
cut the GREY/PINK wire located at the position nr.17.  
**Rear window, driver's side:**  
cut the GREY/GREEN wire located at the position nr.9.  
**Rear window, passenger's side:**  
cut the GREY/BROWN wire located at the position nr.20.  
These wires are located on the coming out of the windows black central placed above the glove compartment, passenger's side.
- ACTVAT./DEACTIVATION CONTROLS**                              **Connections antitheft/vehicle**
- | Art. 3800    | Vehicle     | Position                                      |
|--------------|-------------|---|
| YELLOW/BLACK | PINK/RED    | Pos. nr.13 in the 20 way black connector      |
| GREY/BLACK   | GREEN/BLACK | Pos. nr. 4 in the 20 way black connector      |
| VIOLET       | GREY/PINK   | Pos. nr.35 in the 54 way light blue connector |
| ORANGE       | GREY/GREEN  | Pos. nr.17 in the 54 way light blue connector |
| VIOLET/WHITE | Ground      | Car body                                      |
| ORANGE/WHITE | Positive    | Supply in the fuse box                        |
- The 20 way black connector and the 54 way light blue connector are located on the coming out of the central behind the glove compartment, passenger's side. Refer to the "C" diagram of the dedicated installation manual in the kit of the antitheft.
- IMMOBILISATION POINT**                              **Gasoil pump**  
Cut the VIOLET/GREEN wire located in the wiring harness coming out of the inertial switch.
- STARTER**    **+50:** Cut the WHITE/RED wire located in the wiring harness coming out of the connector of the ignition key.
- BONNET SWITCH**                                      Connect to the YELLOW wire, at the position nr.47, located in the light blue connector of the windows black central, placed in the upper part of the passenger's side glove compartment.
- DOORS SWITCH**                                      Connect to the VIOLET/WHITE wire, at the position nr.12 located in the light blue connector of the windows black central, placed in the upper part of the passenger's side glove compartment.  
**Note:** the signal is a positive one, invert the polarity by means of a relay.
- BOOT SWITCH**    Connect to the YELLOW/BROWN wire, at the position nr.47, in the light blue connector, of the windows black central, placed in the upper part of the passenger's side glove compartment.