



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

SEAT

MOD.

IBIZA

YEAR.

01 →

PETROL
DIESEL



ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, above the left wheel house.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, driver's side.

POWER SUPPLY

+ 30: connect to the RED/YELLOW wire coming out of the 30A fuse located on the relay support, behind the fuse box.
- 31: connect with a ring terminal directly to the car body.

IGNITION WIRE

+15/54: connect to the BLACK/WHITE supply wire of the ignition wire to the relays located on the relay support, behind the fuse box.

DIRECTION INDICATORS

Connect to the GREEN/BLACK and WHITE/BLACK wires located in the wiring harness behind the sill cover, driver's side.

ELECTRIC WINDOWS

Negative control signal

Front window, driver's side:

Cut the WHITE and BLACK/WHITE wires.

Front window, passenger's side:

Cut the YELLOW and BLACK/YELLOW wires.

The above wires are located in the wiring harness coming out of the respective push-buttons.

CENTRAL DOORS LOCKING

Negative/positive control signal

Connect the VIOLET wire (antitheft) at ground, the ORANGE wire (antitheft) at positive fixed, the VIOLET/ORANGE wire (antitheft) to the BROWN/RED wire located at the position nr. 6 of the 8 way white connector, in the fuse box. For the 7900 serie antithefts refer to the **diagram nr. 85**; for the 3100 serie antithefts refer to the **diagram nr. 85A**.

IMMOBILISATION POINT

Fuel pump

Cut the BLUE/BLACK wire located in the wiring harness coming out of the 11 way BROWN connector, placed on the relay support, behind the fuse box.

STARTER

+ 50: Cut the wire located at the position marked '+50' in the wiring harness coming out of the connector of the ignition key.

BONNET SWITCH

Connect to the BROWN/VIOLET wire coming out of the original push-button located on the left of the engine compartment

DOORS SWITCH

Connect to the 1 mm² BROWN/BLACK wire located in the wiring harness coming out of the orange connector placed on the relay support, behind the fuse box.

BOOT SWITCH

Connect to the wire coming out of the connector of the boot lamp.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 85

Diagram to make the central locking on
SEAT IBIZA
(for Bridge serie antithefts)

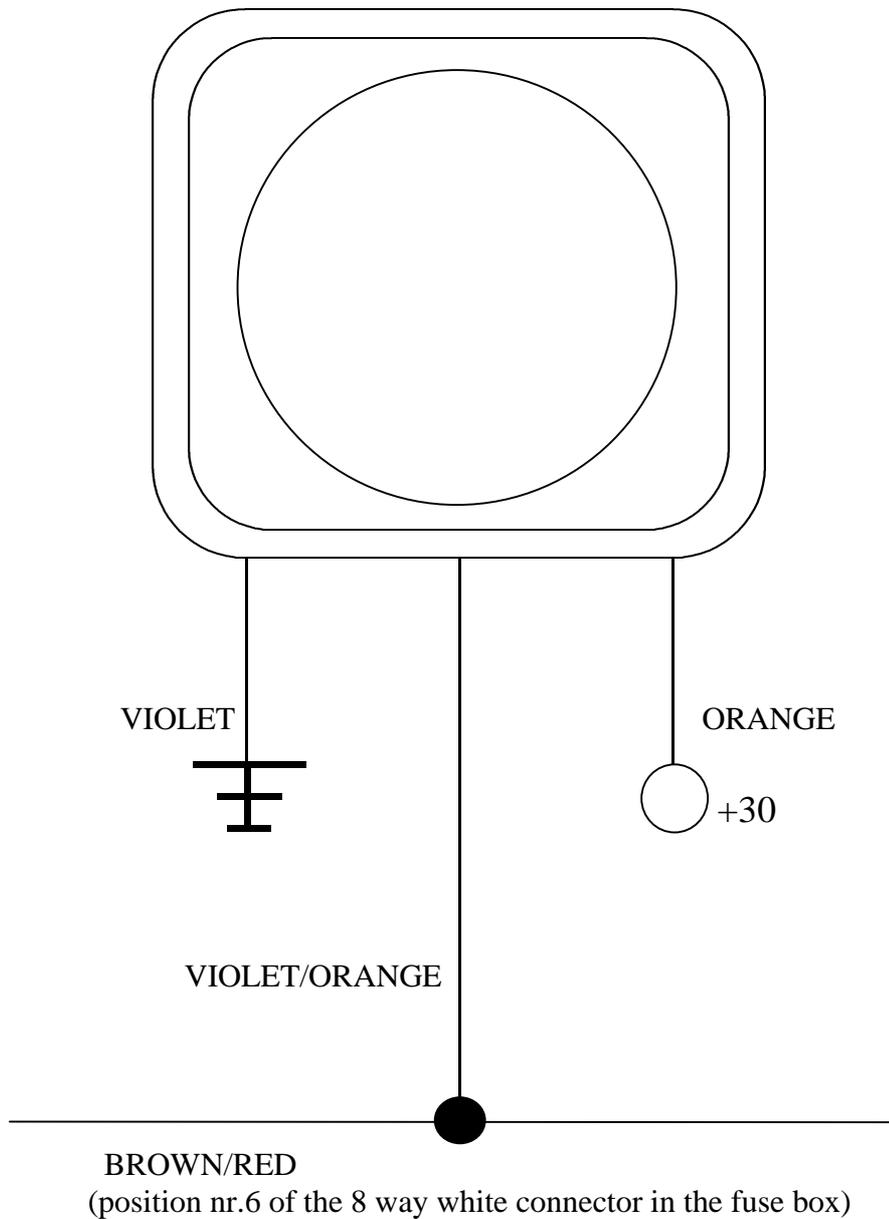



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 85A

Diagram to make the central locking on
SEAT IBIZA
(for 3100 serie antithefts)

