



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	SKODA	MOD.	FABIA	YEAR.	00 →	PETROL <input checked="" type="checkbox"/>	DIESEL <input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, behind the left lateral headlamp.						
CENTRAL UNIT POSITION	Position the modular systems and the modules under the left of the dashboard, driver's side.						
POWER SUPPLY	+ 30: connect to the pin marked "+30" located on the driving bar, under the dashboard, driver's side. - 31: connect with a cable terminal directly to the car body.						
IGNITION WIRE	+ 15/54: connect to the BLACK wire located at the position nr.12 coming out of the S4 connector, on the connectors holder bracket, on the left, under the steering wheel.						
DIRECTION INDICATORS	Connect to the BLACK/GREEN wire at the position nr. 14 and to the BLACK/WHITE wire at the position nr. 16, in the 16 way black connector, on the connectors holder bracket, on the left, under the steering wheel.						
ELECTRIC WINDOWS	Comfort closing It is necessary to set lock command wire to 24s. (VIOLET wire of the antitheft).						
CENTRAL DOORS LOCKING	Negative control signal Connect to the YELLOW/BLUE wire at the position nr. 5 (nr. 2) located in the wiring harness coming out of the violet/white connector placed behind the left lateral side. To this wire are connected both the lock and unlock pulses (add a 180Ω resistance on the ORANGE unlock wire).						
IMMOBILISATION POINT 1	Fuel pump Cut the 0,75 mm ² BLUE/YELLOW wire located in the wiring harness coming out of the relay marked nr. 167 placed above the connectors holder, on the left, under the steering wheel						
STARTER	+50: Cut the RED/BLACK wire located in the wiring harness coming out of the connector of the ignition key.						
BONNET SWITCH	Install an additional switch on the front headlamps bulkhead, above the passenger's side headlamp.						
DOORS SWITCH	Connect to the BROWN/BLACK wire at the position nr. 1, in the 5 way black connector located on the left connectors holder bracket, under the steering wheel. See diagram nr. 69 .						
BOOT SWITCH	Connect to the BROWN/GREEN wire located in the wiring harness coming out of the connector of the rear lamp.						

