



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **SUBARU** MOD. **FORESTER** YEAR **98** → PETROL DIESEL

ALARM/SIREN POSITION	Position the compact alarm and the sirens in the engine compartment, on the bulkhead, drivers side, that divides the engine compartment and the passengers compartment.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, drivers side. Pass the cables through the original rubber sleeve located in the left lateral bulkhead, drivers side.
POWER SUPPLY	+30: Connect to the 4 mm ² WHITE wire located in the 4 way blue connector under the steering column. - 31: Connect with a ring terminal to the car body.
IGNITION WIRE	Connect to the 4 mm ² GREEN wire located in the wiring harness coming out of the 4 way blue connector under the steering column.
DIRECTION INDICATORS	Connect to the 0,75 mm ² BLACK/GREEN and LIGHT GREEN/BLACK wires located in the wiring harness coming out of the 20 way white connector under the steering column.
ELECTRIC WINDOWS	Positive control signal Front window, drivers side Cut the 1,5 mm ² BLUE/RED wire. Front window, passengers side Cut the 1,5 mm ² BLUE/RED wire. Rear window, drivers side Cut the 1,5 mm ² BLUE/RED wire. Rear window, passengers side Cut the 1,5 mm ² BLUE/RED wire. These connections should be effected in the wiring harness coming out of the 9 way transparent connector behind the sill cover, drivers side. For the drivers side window the connection should be effected on the coming out of the inner switch of the drivers side door.
CENTRAL DOORS LOCKING	Connect to the 0,75 mm ² WHITE wire located in the wiring harness coming out of the 12 way white/black connector located in the coming out of the central door locking unit above the fuse box. Refer to diagram nr. 57 for the Bridge serie antitheft or to diagram nr. 57A for 3100 serie antitheft.
IMMOBILISATION POINT 1	Fuel pump Cut the 0,75 mm ² GREEN/ORANGE wire located in the wiring harness coming out of the 4 way green connector joined to the relay of the fuel pump. This relay is fastened on the bracket behind the fuse box.
BONNET SWITCH	Install an additional switch on the headlamp support plate, near the original bonnet bumper rubber.
DOORS AND BOOT SWITCH	Connect to the 0,5 mm ² YELLOW wire located in the wiring harness that comes out of the 12 way white/black connector and coming out of the central door locking unit above the fuse box.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°57

Diagram for doors locking on
SUBARU FORESTER
(for Bridge serie antithefts)

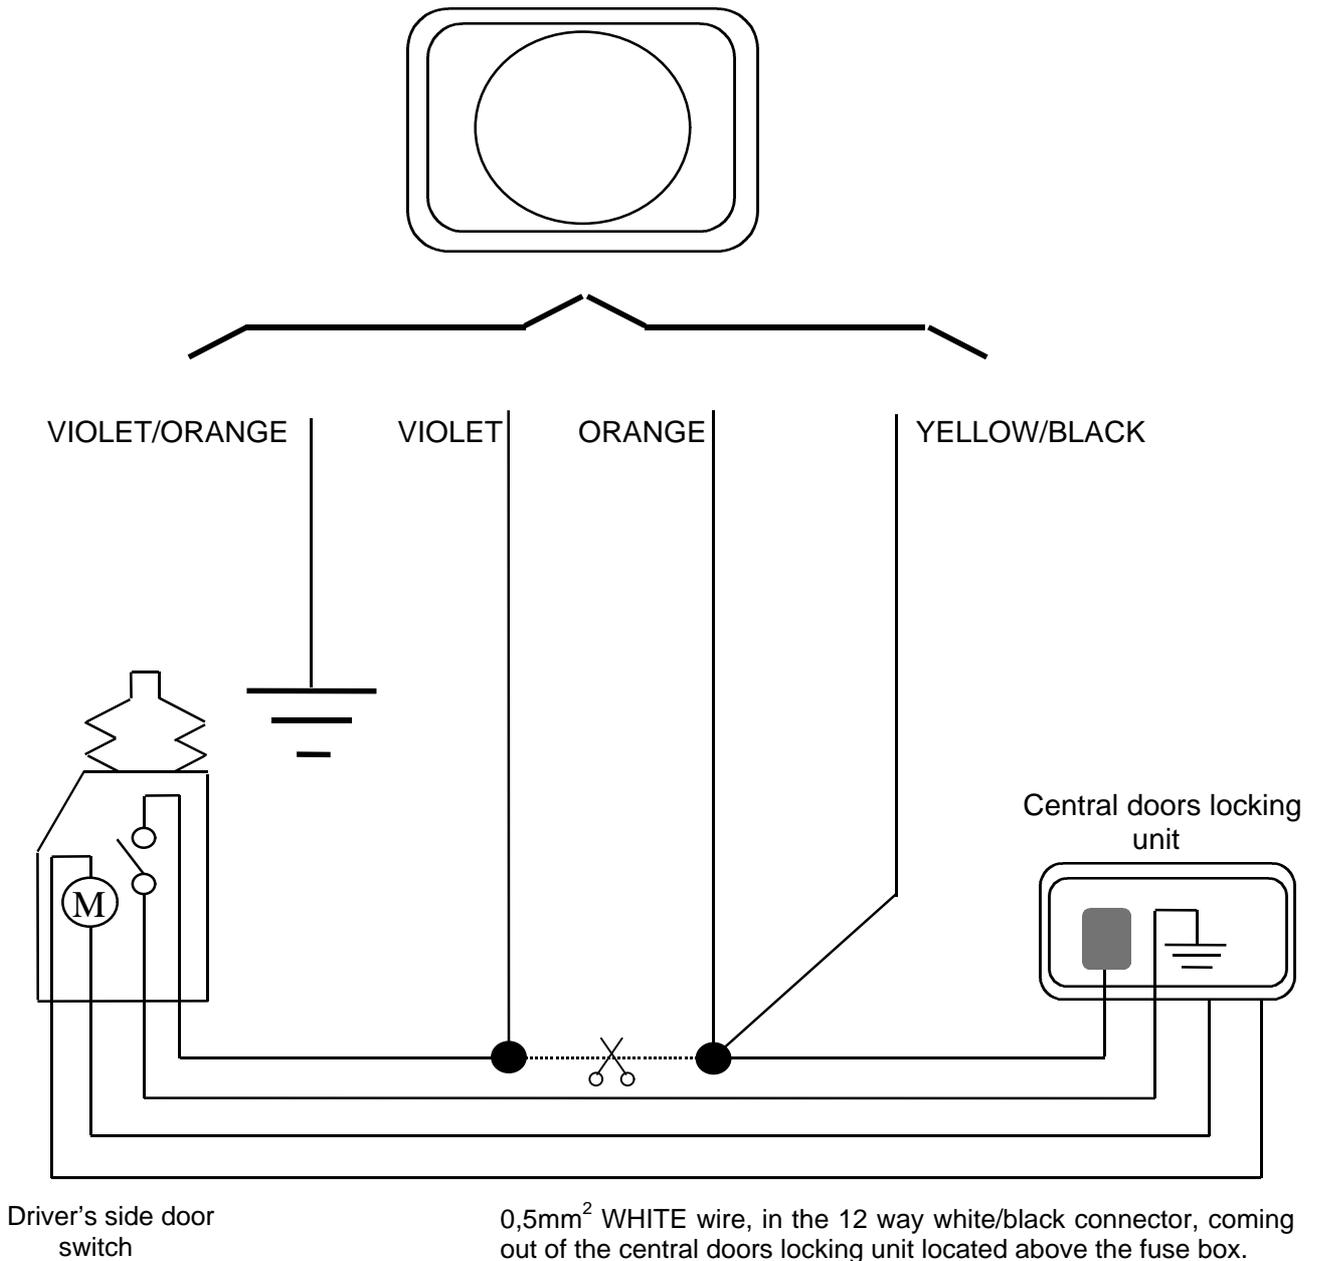

With this diagram, the locking is made with the breaking of the wire, the opening with a ground signal.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°57A

Diagram for doors locking on
SUBARU FORESTER
(for 3100 serie antithefts)

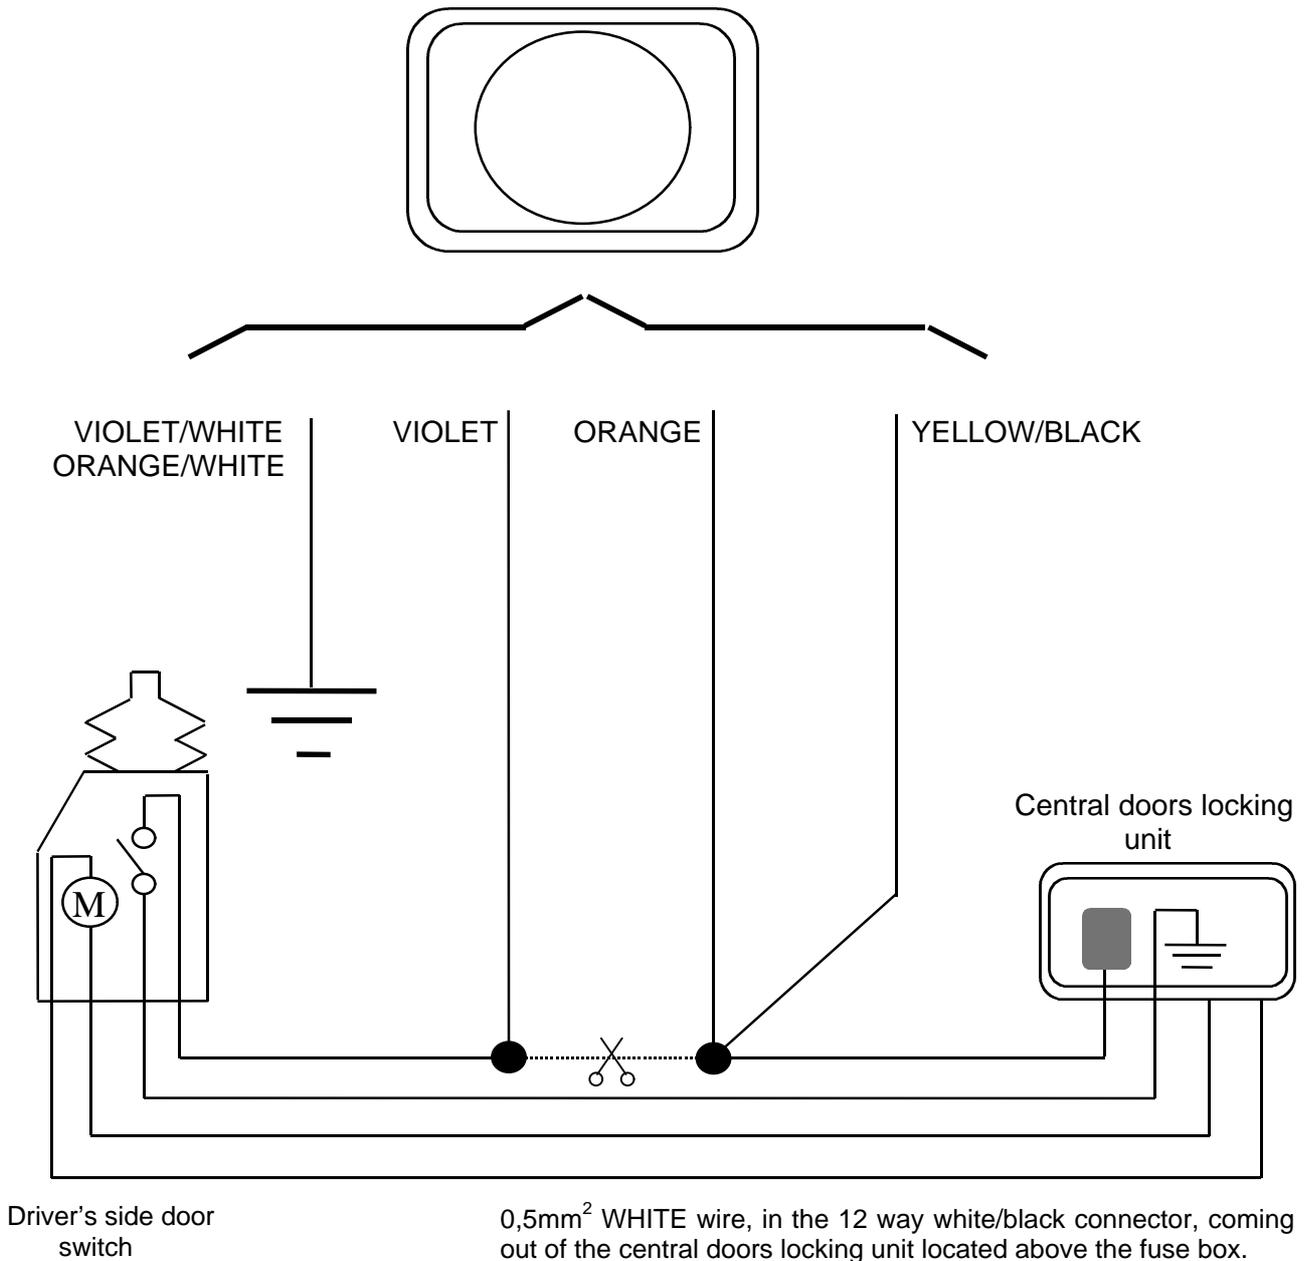

With this diagram, the locking is made with the breaking of the wire, the opening with a ground signal.