



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**SUBARU**

MOD.

**IMPREZA**

YEAR

**02** →

PETROL   
DIESEL

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the panel of the wheel housing, passenger's side.  
The modular systems and the modules should be fixed on the left, under the dashboard, driver's side.

#### POWER SUPPLY

+ **30**: connect to the ground terminal at the entrance of the fuse box.  
- **31**: connect with a cable terminal to the car body.

#### DIRECTION INDICATORS

Connect to the BLACK/GREEN and LIGHT GREEN/BLACK wires located in the wiring harness coming out of the 17 way white connector, placed in the central locking unit, above the fuse box, under the driver's side door.

#### ELECTRIC WINDOWS

##### Positive control signal

##### Front window, driver's side:

cut the 1,5 mm<sup>2</sup> BLUE/RED wire located in the wiring harness coming out of the windows switches, directly inside the driver's side door.

##### Front window, passenger's side:

cut the 1,5 mm<sup>2</sup> RED/BLUE wire.

##### Rear window, driver's side:

cut the 1,5 mm<sup>2</sup> GREEN/YELLOW wire.

##### Rear window, passenger's side:

cut the 1,5 mm<sup>2</sup> WHITE/BLUE wire.

The connections should be made in the wiring harness coming out of the 25 way white connector placed on the base of the driver's side member.

#### CENTRAL DOORS LOCKING

##### Negative control signal (with wire interruption)

Cut the WHITE wire, located in the wiring harness coming out of the 17 way white connector, of the central locking unit placed above the fuse box, under the driver's side dashboard. Refer to **diagram nr. 140** for Bridge serie antithefts. For the 3100 and 3900 series antithefts refer to **diagram nr. 140A**.

#### IMMOBILISATION POINT

##### Fuel pump

Cut the 1,5 mm<sup>2</sup> GREEN/RED wire, located in the wiring harness coming out of the 12 way white connector of the central of the immobilisator, fixed to the steering column.

#### STARTER

+**50**: Cut the BLACK/WHITE wire located in the wiring harness coming out of the 4 way blue connector, placed on the right of the steering column.

#### BONNET SWITCH

Install an additional switch on the front headlamp support plate, in correspondence with the left lateral headlamp.

#### DOORS SWITCH

Connect to the YELLOW wire located in the central doors locking unit placed above the fuse box, under the driver's side dashboard.

#### BOOT SWITCH

Connect to the YELLOW/RED wire located in the wiring harness coming out of the connector of the boot lamp.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 140

Diagram to make the central locking on  
**SUBARU IMPREZA**  
(for Bridge serie antithefts)

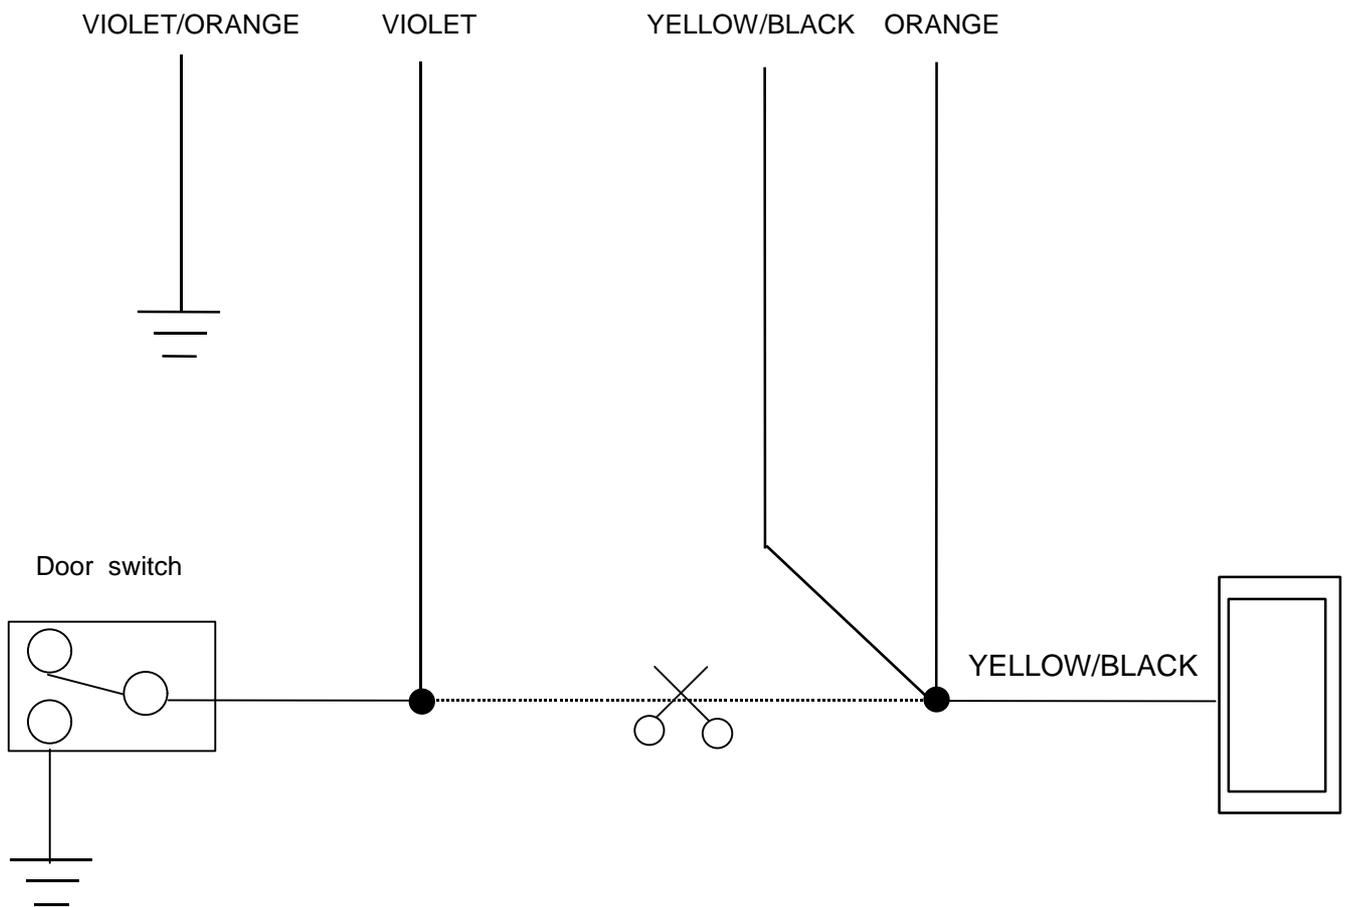

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

suimp02gbb.doc



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°140A

Diagram to make the central locking on  
**SUBARU IMPREZA**  
(for 3100 and 3900 serie antithefts)

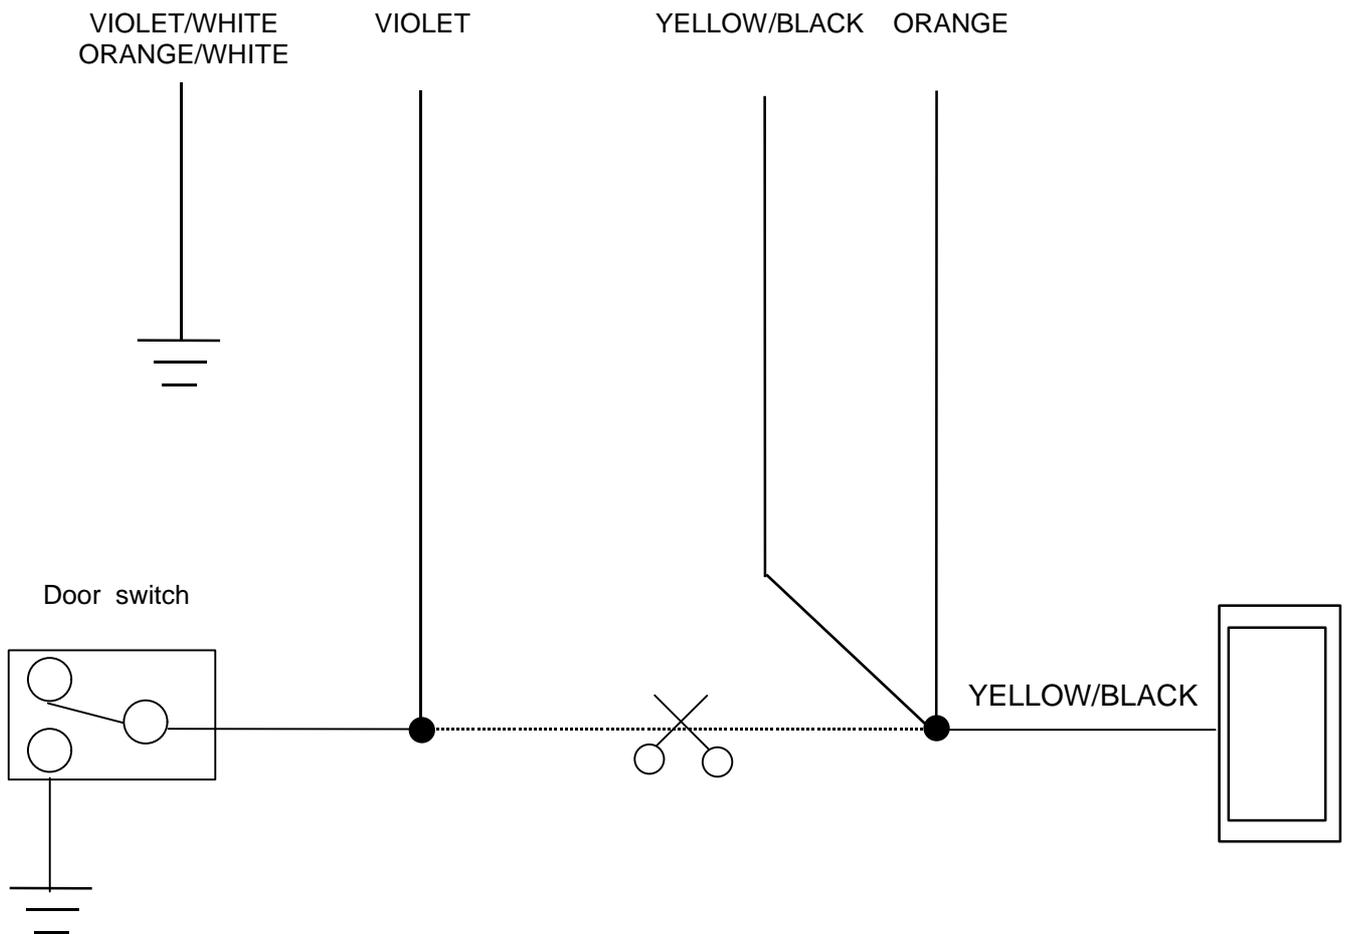

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

suiimp02gbb.doc