



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	MOD.	YEAR.	PETROL	DIESEL
<b>SUZUKI</b>	<b>IGNIS</b>	<b>02</b> →	<input checked="" type="checkbox"/>	<input type="checkbox"/>

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens on the support of the shock absorber, driver's side. Pass the cables through the original rubber sleeve located in the bulkhead that divides the engine compartment and the driver's side passenger's compartment, the same rubber sleeve of the bonnet opening wire.
<b>CENTRAL UNIT POSITION</b>	The modular systems and the modules should be positioned under the dashboard, driver's side.
<b>POWER SUPPLY</b>	<b>+30:</b> connect to the 3 mm <sup>2</sup> RED wire located in a multiway connector, in the fuse box. <b>- 31:</b> connect to one of the ground terminal located behind the left lateral bulkhead, driver's side.
<b>IGNITION WIRE</b>	<b>+15/54:</b> Connect to the YELLOW wire with SILVER references located in the wiring harness behind the sill cover, driver's side.
<b>DIRECTION INDICATORS</b>	Connect to the BLUE/YELLOW wire with SILVER references and to the GREEN/RED wire with SILVER references located in the wiring harness behind the driver's side sill cover.
<b>ELECTRIC WINDOWS</b>	<b>Positive control signal</b> <b>Front window, driver's side:</b> cut the the RED wire with SILVER references located in the wiring harness coming out of the control switch, directly inside the driver's side door. <b>Front window, passenger's side:</b> cut the RED/WHITE wire with SILVER references, at the position nr. 7, coming out of the 14 way white connector, located under the dashboard driver's side, in the upper part of the bulkhead.
<b>CENTRAL DOORS LOCKING</b>	<b>Negative control signal</b> To make the lock and unlock of the doors, it is necessary to cut the BROWN/WHITE wire with SILVER references located in the wiring harness coming out of the 14 way white connector, placed in the upper part, under the dashboard, driver's side. For the Bridge serie antithefts make reference to the <b>diagram nr. 97</b> and for the 3100 serie antithefts make reference to the <b>diagram nr. 97A</b> .
<b>IMMOBILISATION POINT</b>	<b>Fuel pump</b> Cut the PINK wire with SILVER references located in the wiring harness behind the sill cover, driver's side.
<b>STARTER</b>	<b>+50:</b> Cut the 1,5 mm <sup>2</sup> BLACK/YELLOW wire located in the wiring harness coming out of the 6 way white connector, directly on the coming out of the ignition key.
<b>BONNET SWITCH</b>	Install an additional switch on the front headlamp support grill, driver's side.
<b>DOORS AND BOOT SWITCH</b>	Connect to the BLACK/RED wire located in the wiring harness behind the driver's side sill cover.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 97

Diagram to make the central locking on  
**SUZUKI IGNIS** year 2002  
(for Bridge serie antithefts)

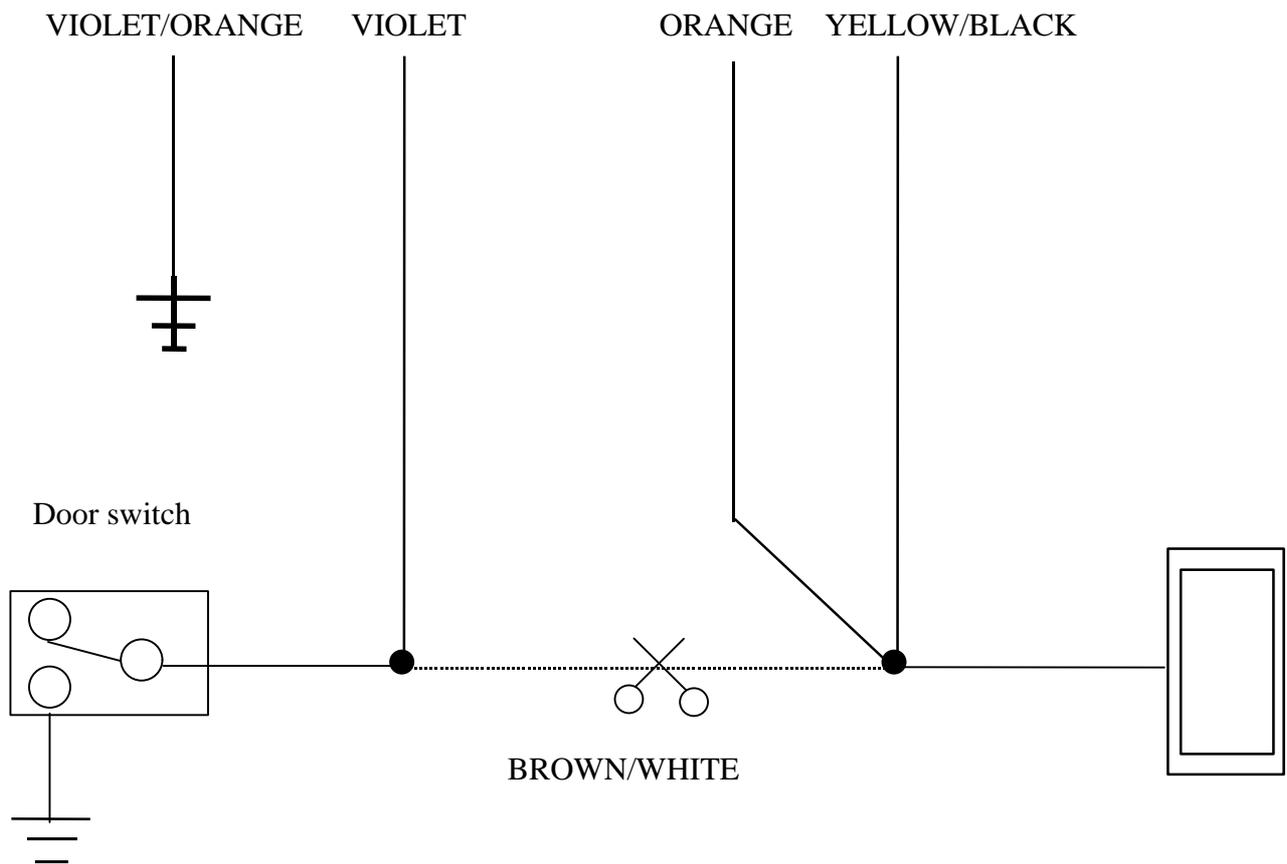



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 97A

Diagram to make the central locking on  
**SUZUKI IGNIS** year 2002  
(for 3100 and 3900 series antithefts)

