



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **SUZUKI** MOD. **LIANA** YEAR. **02** → PETROL DIESEL

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the bulkhead that divides the engine compartment and the passenger's compartment on the side of the servobrake.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.
POWER SUPPLY	+30: connect to the WHITE/GREEN wire in the black connector coming out of the ignition key. -31: connect to one of the ground terminals located behind the driver's side bulkhead.
IGNITION WIRE	+15/54: connect to the YELLOW/BLACK wire in the black connector coming out of the ignition key.
DIRECTION INDICATORS	Connect to the GREEN/REED/silver wire and BLUE/YELLOW/silver wire, in the 12 way grey connector, located on the connectors holder, under the driver's side dashboard, behind the fuse-holder box.
ELECTRIC WINDOWS	Negative controls Front window, driver's side: cut the RED/silver wire in the push buttons panel, inside the driver's side door. Front window, passenger's side: cut the RED/WHITE/silver wire in the push buttons panel, inside the driver's side door. Rear window, driver's side: cut the RED/YELLOW/silver wire located in the bundle of cables behind the driver's side sill cover. Rear window, passenger's side: Cut the WHITE/RED/silver wire located in the bundle of cables behind the driver's side sill cover.
CENTRAL DOORS LOCKING	Negative control signal Connect to the BROWN/WHITE wire, at the position nr.14 (lock) and to the BLUE/ORANGE wire, at the position nr. 16 (unlock), located in the 18 way white connector, on the connectors holder plate, under the driver's side dashboard, behind the fuse holder box.
IMMOBILISATION POINT	Fuel pump Cut the PINK wire with two silver points, in the bundle of cables behind the driver's side sill cover.
STARTER	+50: Cut the BLACK /YELLOW wire located in the wiring harness coming out of the ignition key.
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.
DOORS AND BOOT SWITCH	Connect to the BLACK/RED/silver wire, at the position nr.15, in the 18 way white connector, on the connectors holder plate, under the driver's side dashboard, behind the fuse-holder box.