



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE

**SUZUKI**

MOD.

**WAGON**

YEAR

**97** →

PETROL   
DIESEL

**ALARM/SIREN POSITION**

Position the compact alarms and the sirens in the engine compartment, near the left lateral panel, passenger's side.

**POWER SUPPLY**

**+ 30:** connect to the 2mm<sup>2</sup> YELLOW/WHITE wire located in the general power supply wiring harness of the fuse box.  
**- 31:** connect to one of the original pins located on the car body, under the steering column.

**IGNITION WIRE**

**+ 15/54:** connect to the wire located in the wiring harness behind the left lateral panel, driver's side.

**DIRECTION INDICATORS**

Connect to the 0,5 mm<sup>2</sup> GREEN/YELLOW and GREEN/RED wires located in the wiring harness behind the left lateral panel, driver's side.

**ELECTRIC WINDOWS**

The vehicle is not provided with serial electric windows.

**CENTRAL DOORS LOCKING**

**Additional motor**

It is necessary to install a 2 wires motor on the driver's side door.

**IMMOBILISATION POINT**

**Fuel pump**

Cut the 1 mm<sup>2</sup> RED/BLACK wire located in the wiring harness coming out of the pump relay, on the left of the engine compartment. The relay is fixed with a relayholder bracket near the panel of the wing. There are three relays, that of the fuel pump is in the centre.

**STARTER**

**+ 50:** connect to the wire located in the wiring harness coming out of the ignition key connector, at the position marked "+50".

**BONNET SWITCH**

Install an additional switch on the headlamp support plate, near the original bumper rubber.

**DOORS SWITCH**

Connect to the 1 mm<sup>2</sup> RED/BLACK wire located in the wiring harness behind the left lateral panel, driver's side, near the sill cover.

**BOOT SWITCH**

Connect to the driver's side door switch.