



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **VOLKSWAGEN**

MOD. **PASSAT TDI**

YEAR. **01** →

PETROL   
DIESEL

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens under the cooling fluid bowl in the engine compartment.

#### CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, driver's side.

#### POWER SUPPLY

+ **30**: connect with a 6 mm<sup>2</sup> eyelet faston to the feed bar located under the dashboard, driver's side.  
- **31**: connect to one of the ground terminals located behind the plastic covering on the base of the driver's side pillar.

#### IGNITION WIRE

+ **15/54**: connect to the BLACK/BLUE wire at the position nr. 4 of the 10 way connector, marked 15, behind the driver's side bulkhead.

#### DIRECTION INDICATORS

Connect to the BLACK/WHITE wire at the position nr. 9 and to the BLACK/GREEN wire at the position nr. 10 of the 10 way light brown connector, marked 12, of the connectors holder support, behind the bonnet opening lever.

#### ELECTRIC WINDOWS

##### Negative control signal

The closing of the electric windows is obtained timing the RED/GREEN wire used for the closing of the doors.

#### CENTRAL DOORS LOCKING

##### Negative control signal

Connect to the RED/GREEN wire at the position nr. 24 (lock) and to the RED/BLUE wire at the position nr. 4 (unlock). These connections can be made directly in the wiring harness coming out of the driver's side door switch or as alternative, in the wiring harness coming out of the 29 way black connector of the windows central locking, inside the driver's side door.

#### IMMOBILISATION POINT

##### Gasoil pump

Cut the BLACK wire located at the position nr. 5 of the 10 way orange connector located in the lower part of the aluminium covered central, in the black box, in the windshield wiper compartment, driver's side.

#### STARTER CUT OFF

+ **50**: Cut the wire located in the wiring harness coming out of the ignition key, at the position marked "+50".

#### BONNET SWITCH

Connect to the RED/BROWN wire at the position nr. 6, of the 10 way light brown connector of the connectors holder support, behind the covering of the bonnet opening lever.

#### DOORS SWITCH

Connect to the BROWN/WHITE wire at the position nr. 6, in the 10 way light green connector, marked 6, of the connectors holder support, behind the covering of the bonnet opening lever.

#### BOOT SWITCH

Connect to the BROWN/BLACK wire at the position nr. 7 or nr. 10 in the 23 way black connector of the modular system placed in the box, under the moquette on front of the driver's seat.