



## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

**REV. 00**

[www.cobra.it](http://www.cobra.it)

MAKE **VOLKSWAGEN** MOD. **TOUAREG** YEAR **03** → PETROL   
 DIESEL

<b>ALARM/SIREN POSITION</b>	It is suggested the installation of modular antithefts, as the structure of the bonnet/engine compartment does not allow enough space to install compact antithefts.
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules under the dashboard, driver's side.
<b>POWER SUPPLY</b>	<b>+30:</b> connect to the 4 mm <sup>2</sup> WHITE/RED wire located in a multiway connector in the fuse box placed above the pedal accelerator. <b>-31:</b> connect to the ground terminal located behind the driver's side bulkhead.
<b>IGNITION WIRE</b>	<b>+15/54:</b> connect to the 1 mm <sup>2</sup> BLACK wire located in a multiway connector, in the fuse box placed above the pedal accelerator.
<b>DIRECTION INDICATORS</b>	<b>Positive control signal</b> Connect to the BLACK/WHITE wire at the position nr.1 of the 6 way LIGHT BROWN connector and to the BLACK/GREEN wire at the position nr.4 of the 6 way blue connector coming out of the central locking unit placed on the right of the steering column, under the driver's side dashboard. <b>Negative control signal</b> As alternative, it is possible to connect to the control wire of the 4 direction indicators located in the wiring harness of the connector coming out of the 4 direction indicators push-button located in the central tunnel. The control is with negative polarity, so you must add an additional relay to invert the positive signal of the direction indicators control of the Cobra antithefts.
<b>ELECTRIC WINDOWS</b>	<b>Negative control signal</b> Connect to the 1 mm <sup>2</sup> YELLOW/BLUE wire located in the wiring harness of the grey connector coming out of the windows operating central placed behind the covering inside the driver's side door.
<b>CENTRAL DOORS LOCKING</b>	<b>Negative control signal</b> Connect with the unlocking wire (ORANGE) and to the locking wire (VIOLET) of the antitheft to the YELLOW wire in the wiring harness of the 3 way connector coming out of the UNLOCK/LOCK original push-button of the vehicle located in the driver's side door. To make the connection you must insert a 1500 Ohm resistor in serie to the VIOLET wire of the antitheft.
<b>IMMOBILISATION POINT</b>	<b>Gasoil pump</b> Cut the wire at the position nr.8 in the pink connector, on the left, located in the connectors holder box placed in the driver's side engine.
<b>STARTER</b>	<b>+50:</b> Cut the 2,5 mm <sup>2</sup> BLACK wire in the pink connector, on the left, located in the connectors holder box placed in the driver's side engine.
<b>BONNET SWITCH</b>	Connect to the wire located in the wiring harness coming out of the lock of the bonnet.
<b>DOORS SWITCH</b>	Connect to the wire coming out of the 2 way connector located in the lamp placed in the bulkhead covering the centrals under the driver's side dashboard.
<b>BOOT SWITCH</b>	Connect to the wire that actuates the lamp located in the rear boot.