



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE **MERCEDES** MOD. **C CLASS\*** YEAR **96** → PETROL   
DIESEL

\* Models with original equipment keyless entry system.

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the engine compartment, on the wheel housing, passenger's side. Position the modular systems and the modules under the dashboard, driver's side. Pass the cables through the rubber sleeve located at the entrance of the fuse box in the engine compartment.
<b>POWER SUPPLY</b>	+ <b>30</b> : connect to the 6 mm <sup>2</sup> RED wire located inside the cabled part of the fuse box. - <b>31</b> : connect with a cable terminal to the ground outlet located on the left panel, driver's side.
<b>IGNITION WIRE</b>	+ <b>15/54</b> : connect to the 2,5 mm <sup>2</sup> PINK/RED wire located in the wiring harness coming out of the 2 way white connector behind the fuse box.
<b>DIRECTION INDICATORS</b>	Connect to the 0,75 mm <sup>2</sup> BLACK/WHITE and BLACK/GREEN wires located at the positions nr. 4 and nr. 5 of the 8 way black connector, behind the fuse box.
<b>ELECTRIC WINDOWS</b>	Keep pressed the original doors closing key to obtain the windows closing.
<b>ALARM CONTROLS</b>	<b>Negative controls</b> It is necessary to install a pneumatic vacuum actuator to arm/disarm the alarm unit extension. It is suggested to refer to the <b>diagram nr. 43</b> .
<b>IMMOBILISATION POINT</b>	The vehicle is provided with original immobilizer.
<b>BONNET SWITCH</b>	Install an additional switch on the headlamp support plate near the original bonnet bumper rubber.
<b>DOORS SWITCH</b>	Connect to the following wires separating the 5 lines with as much diodes: (left front door) BROWN/GREY wire, (right front door) BROWN/BLUE wire, (left rear door) BROWN/GREEN, (right rear door) BROWN/VIOLET wire, (boot ) BROWN/YELLOW wire. All those wires are of 0,75 mm <sup>2</sup> located at the positions nr. 14, 16, 17, 18 and 13 in the 18 way white/black connector coming out of the compressor/central unit under the rear seat cover, passenger's side.




## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

### FITTING DIAGRAM N° 43

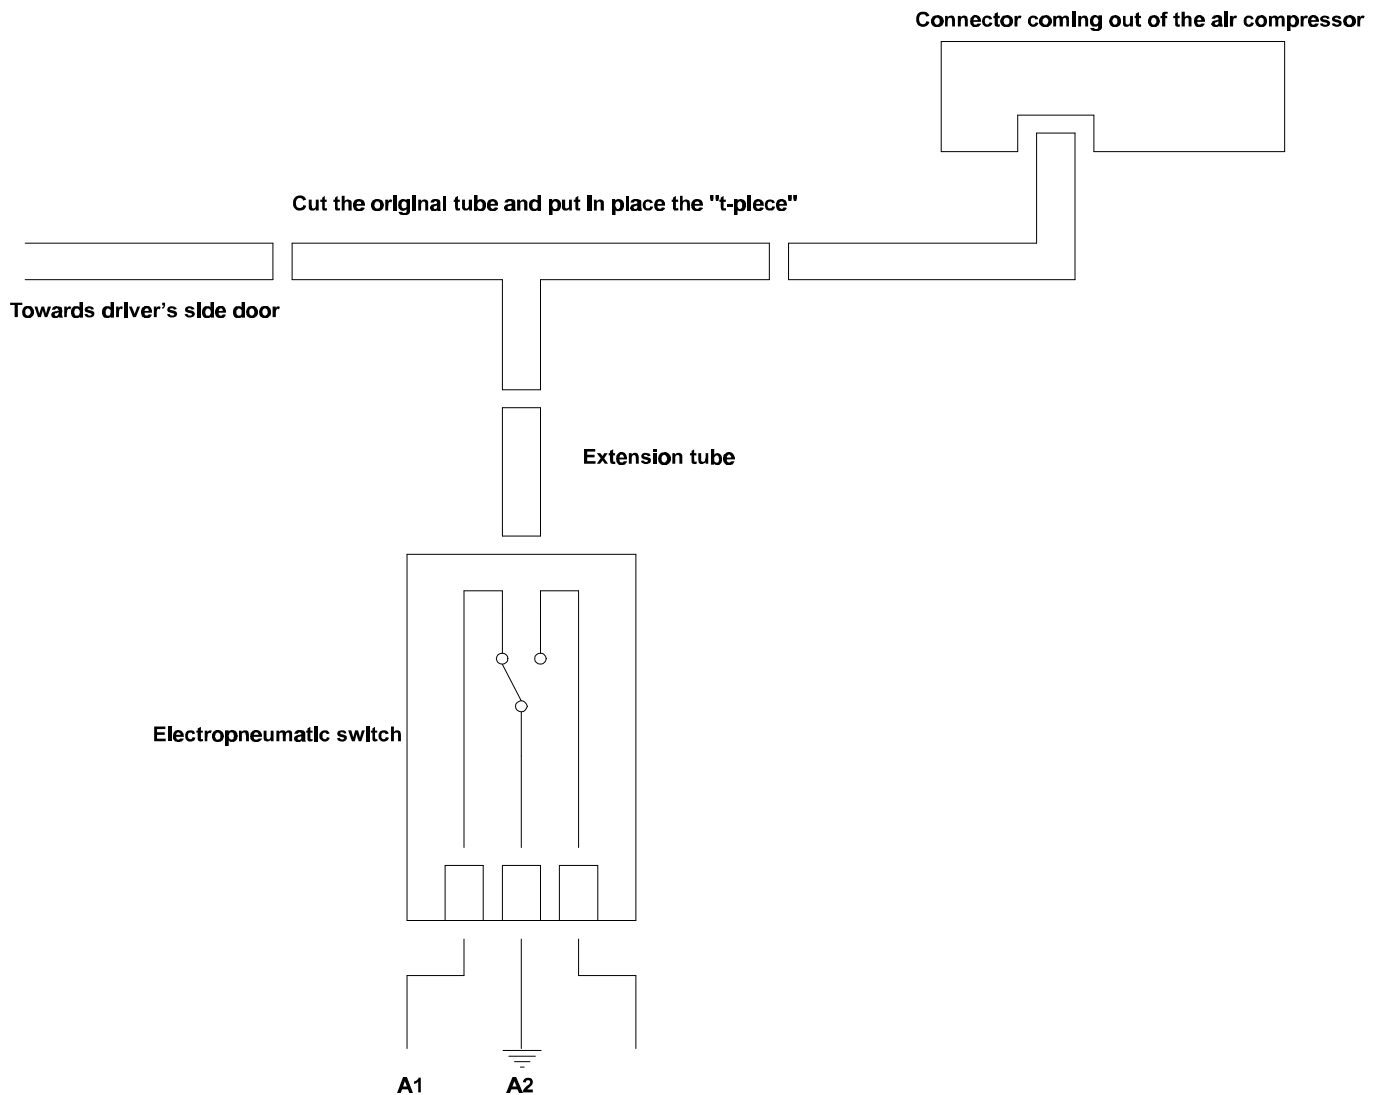

**A1 alarm setting negative control signal**

**A2 alarm unsetting negative control signal**

The components mentioned above can be requested directly to the Mercedes dealer referring to the mentioned codes.

**A 202800322 "T" tube**

**A 2028050244 extension tube**

**A 1248001675 electropneumatic switch**