



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE

**PEUGEOT**

MOD.

**306\***

YEAR

**98** →

PETROL   
DIESEL

\* Models with original equipment keyless entry system.

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the left lateral panel of the driver's side mudguard.

#### POWER SUPPLY

+ **30**: connect to the 4 mm<sup>2</sup> RED wire located in the multiway connector at the entrance of the fuse box.  
- **31**: connect with a cable terminal to one of the ground bolts behind the left lateral panel, driver's side.

#### IGNITION WIRE

+ **15/54**: connect to the 3 mm<sup>2</sup> YELLOW wire located in the wiring harness, in the connector coming out of the ignition key.

#### DIRECTION INDICATORS

Connect to the RED wire marked nr. 2330 at the position A4 and to the GREEN wire marked nr. 2340 at the position A2 in the wiring harness coming out of the 9 way black connector, under the steering column.

#### ELECTRIC WINDOWS

##### Positive control signal

##### Front window, driver's side

Cut the 2 mm<sup>2</sup> wire nr. 604 located in the wiring harness coming out of the switch of the respective window.

##### Front window, passenger's side

Cut the 2 mm<sup>2</sup> wire nr. 606 located in the wiring harness coming out of the switch of the respective window.

#### ALARM CONTROLS

##### For antitheft system serie 0144

It is suggested to make reference to the **diagram nr. 53**.

#### IMMOBILISATION POINT

##### Fuel pump

Cut the 1,5 mm<sup>2</sup> BLUE wire marked nr. 121 at the position nr. 7 located in the wiring harness coming out of the 13 way red connector, in the lower part of the dashboard.

#### BONNET SWITCH

Install an additional switch on the headlamp support plate, in correspondence with the driver's side headlamp.

#### DOORS SWITCH

Connect to the GREEN wire marked nr.30 or nr. 304 located in the wiring harness coming out of the central doors locking unit, alternatively connect to the WHITE wire marked nr. 300 or nr. 304 at the position 2B, in the wiring harness coming out of the 13 way white connector in the fuse box.

#### BOOT SWITCH

Connect to the WHITE wire marked nr. 319 located in the wiring harness coming out of the connector of the boot lamp.



CAR SECURITY



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 53

Central doors locking unit

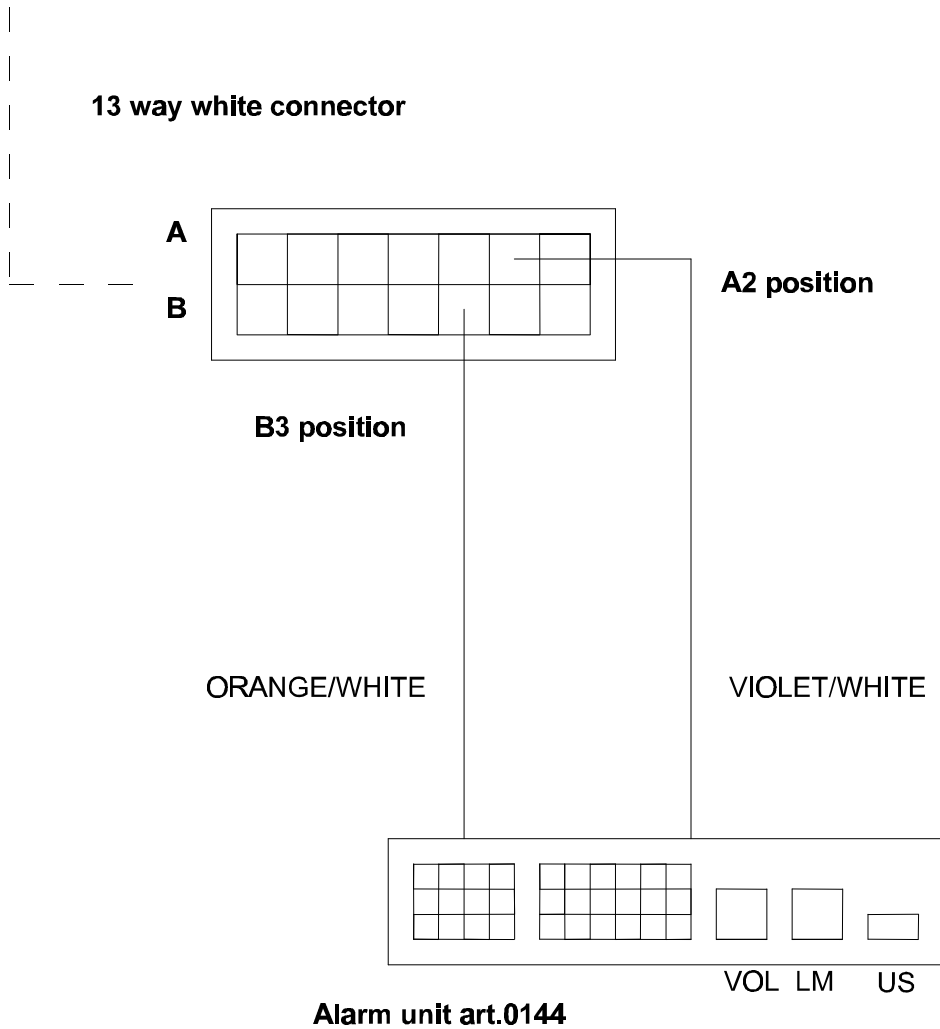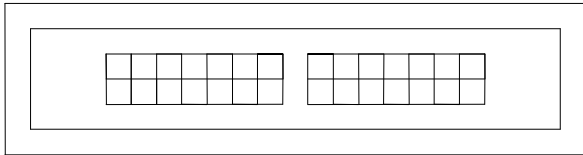

For the connection of art. 0144 on PEUGEOT 306