



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	PEUGEOT	MOD.	306	YEAR	99 →	PETROL	<input checked="" type="checkbox"/>	DIESEL	<input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens on the left in the engine compartment.								
CENTRAL UNIT POSITION	Position the modular systems and the modules under the left side of the dashboard, driver's side.								
POWER SUPPLY	+ 30: connect to the wire located at the position nr.1 in the 15 way black connector coming out of the central doors locking unit. - 31: connect directly to the car body.								
IGNITION WIRE	+ 15/54: connect to the wire located at the position nr. 5 in the 15 way black connector coming out of the central doors locking unit.								
DIRECTION INDICATORS	Connect to the wires located at the positions nr. 2 and nr. 10 in the 15 way black connector coming out of the central doors locking unit.								
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the wire nr. 604 coming out of the control switch. Front window, passenger's side: cut the wire nr. 606 coming out of the respective control switch.								
CENTRAL DOORS LOCKING	Negative control signal For Bridge serie antithefts, follow the diagram nr. 52 . Connection can be done cutting the 1 mm ² WHITE wire located in the wiring harness coming out of the connector of the driver's side door. For the 3100 serie antithefts follow the diagram nr. 52A .								
IMMOBILISATION POINT	Fuel pump Cut the BLUE wire marked nr. 121 in the wiring harness coming out of the 13 way red connector located in the lower part of the dashboard, driver's side.								
STARTER	+ 50: Cut the wire at the position marked "+50" directly in the wiring harness coming out of the ignition key.								
BONNET SWITCH	Install an additional switch on the headlamp support plate, near the rubber grommet of the bonnet.								
DOORS SWITCH	Connect to the wire at the position nr. 15 in the 15 way black connector coming out of the central door locking unit.								
BOOT SWITCH	Connect to the wire at the position nr. 16 in the 26 way yellow/black connector coming out of the central door locking unit.								




CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 52

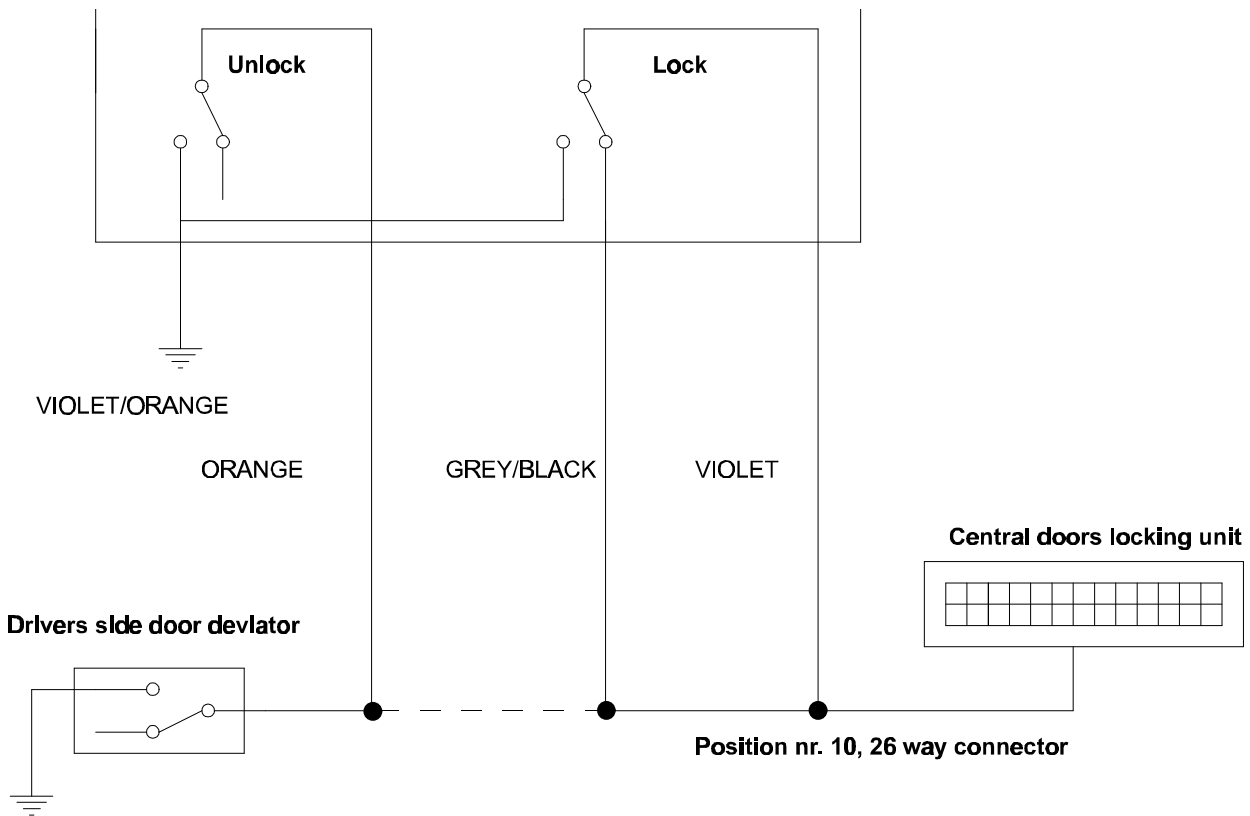

It is necessary to make above connection to lock the doors. The wire mentioned above is located at the position nr.10 in the 26 way blue connector of the central unit of the vehicle, under the driver's side dashboard near the steering column.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 52A

Diagram to make the central door's locking on
PEUGEOT 206 - 306
(for 3100 serie antithefts)

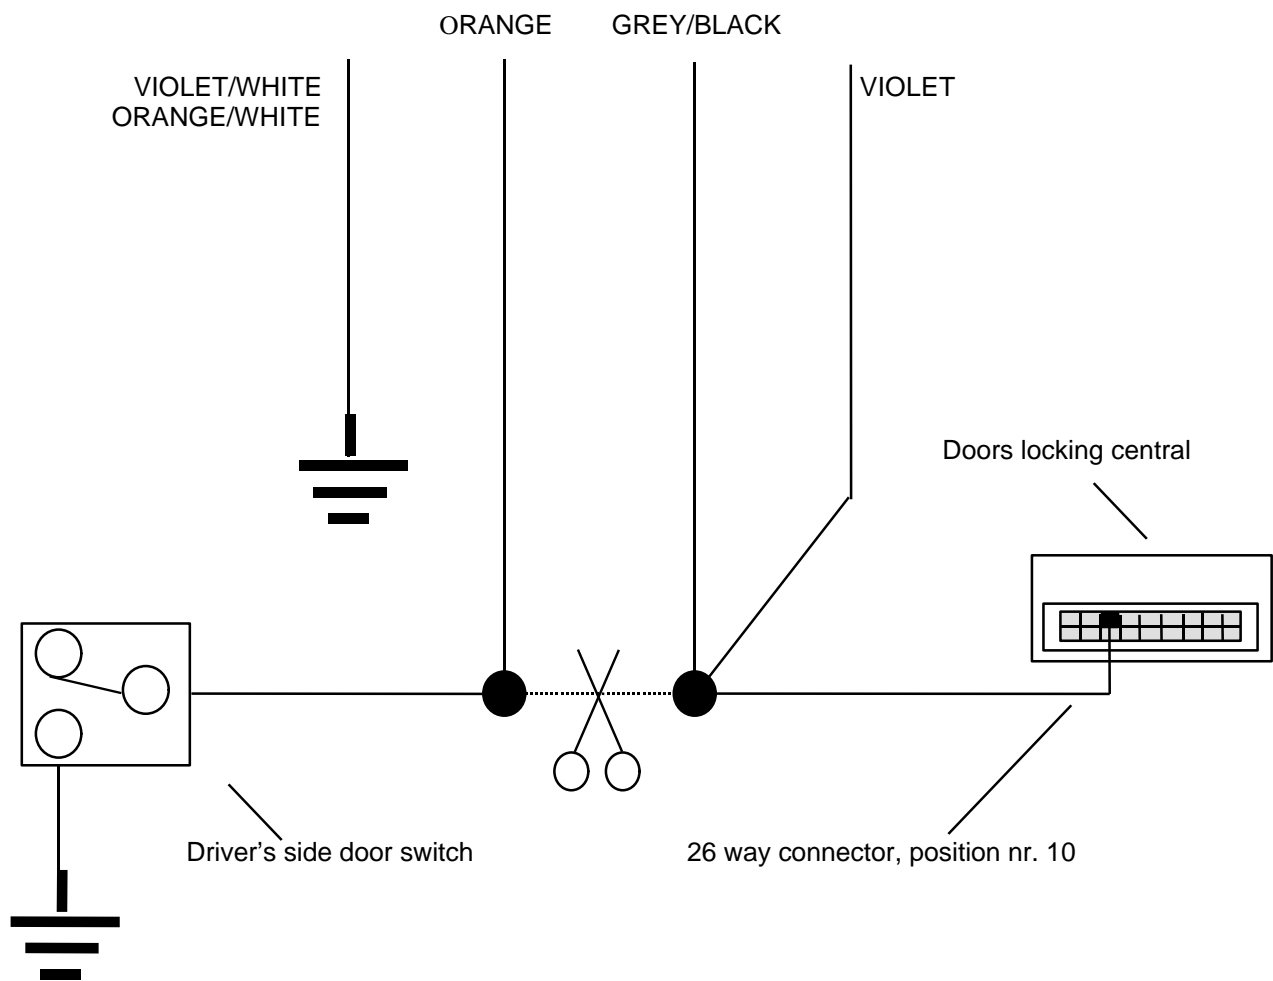

To make the doors locking it is necessary to do the above connection. The 0,35mm² wire signaled is located at the position nr.10 in the wiring harness coming out of the 26 way blue connector of the operating central of the vehicle located in the lower part of the driver's side dashboard, near the steering column.