



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

MAKE **VOLVO** MOD. **V40\*** YEAR. **02**  PETROL  DIESEL

\* Models with original equipment keyless entry system.

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens on the wheel house, passenger's side.
<b>CENTRAL UNIT POSITION</b>	The modular systems and the modules should be positioned under the dashboard.
<b>POWER SUPPLY</b>	<b>+30:</b> connect to the 4 mm <sup>2</sup> RED/WHITE wire located in the wiring harness coming out of the multiway connector at the entrance of the fuse box. <b>-31:</b> connect to one of the terminals coming out of the original power supply behind the left lateral panel, driver's side.
<b>IGNITION WIRE</b>	<b>+15/54:</b> connect to the WHITE wire, at the position nr. 4, in the 22 way connector, on the locking central unit, under the central tunnel.
<b>DIRECTION INDICATORS</b>	Connect to the YELLOW/BROWN and GREEN/BLACK wires, in the 26 way green connector, on the locking central unit placed under the glove compartment, in the central tunnel.
<b>ELECTRIC WINDOWS</b>	<b>Positive control signal</b> <b>Front window, drivers side:</b> cut the BROWN wire on the serial push botton, driver's side door. <b>Front window, passengers side:</b> cut the GREEN wire on the serial push botton, driver's side door. <b>Rear window, drivers side:</b> cut the YELLOW/WHITE wire coming out of the core hitch, driver's side door. <b>Rear window, passengers side:</b> cut the BROWN/WHITE wire coming out of the core hitch, driver's side door.
<b>ACTIVAT./DEACTIVATION CONTROLS</b>	<b>Connections antitheft/vehicle</b> Refer to the <b>diagram nr. 153</b> .
<b>IMMOBILISATION POINT</b>	<b>Gasoil pump</b> Cut the YELLOW/RED wire at the 20A fuse, marked "ENGINE", in the relay holder box, in the engine compartment.
<b>STARTER</b>	<b>+ 50:</b> cut the GREEN wire located in the wiring harness coming out of the ignition key.
<b>BONNET SWITCH</b>	Install an additional switch on the front headlamp support plate, driver's side.
<b>DOORS SWITCH</b>	Connect to the wires: GREEN (ant.left), GREEN/ORANGE (ant. right), GREEN/RED (post. left), LIGHT BLUE/YELLOW (post. right), in the 26 way green connector, on the central doors locking unit, located under the glove compartment, in the central tunnel.
<b>BOOT SWITCH</b>	Connect to the BLUE/BROWN wire, in the 26 way connector, in the central doors locking unit, located under the glove compartment, in the central tunnel.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

FITTING DIAGRAM N° 153

Diagram to connect art. 3800 on  
**VOLVO V40 - S40**

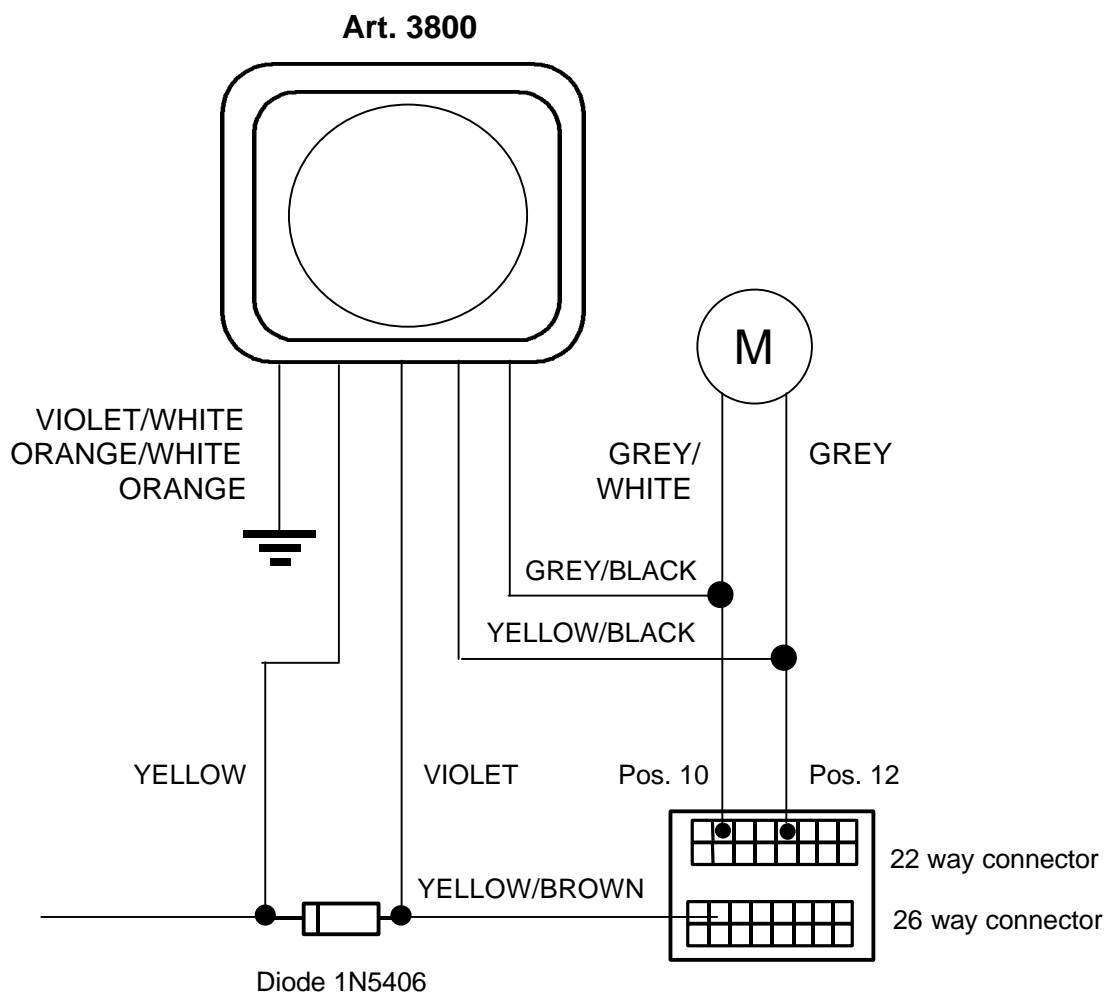

The above connectors are located on the coming out of the central locking unit placed under the glove compartment, in the central tunnel.