



## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00


www.cobra.it

MAKE **CITROEN** MOD. **C 3** YEAR **03** → PETROL  DIESEL

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens on the wheel house, passenger's side.
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules under the dashboard, driver's side.
<b>POWER SUPPLY</b>	<p><b>+30:</b> connect to the 3 mm<sup>2</sup> YELLOW wire located at the position nr.2, of the 2 way grey/yellow connector, coming out of the front part of the BSI operating central.</p> <p><b>- 31:</b> connect to the wire coming out of the ground terminal located behind the left lateral bulkhead, driver's side.</p>
<b>IGNITION WIRE</b>	<b>+15/54:</b> connect to the 2,5 mm <sup>2</sup> LIGHT BLUE wire located in the connector coming out of the ignition key.
<b>DIRECTION INDICATORS</b>	Connect to the GREEN wire at the positions nr.13 and to the WHITE wire at the position nr.14, of the 16 way black connector.
<b>ELECTRIC WINDOWS</b>	<p><b>Positive control signal</b>  <b>Temporized signal</b>  Refer to the <b>fitting diagram nr.194</b></p>
<b>CENTRAL DOORS LOCKING</b>	<p><b>Original door motor control signal</b>  Cut the wires: WHITE, at the position nr. 13 (lock) and BROWN, at the position nr. 15 (unlock) located in the wiring harness coming out of the 16 way grey connector. Refer to the <b>section "A"</b> of the <b>diagram nr. 197</b> for Bridge serie antithefts and to the <b>section "B"</b> of the <b>fitting diagram nr. 197</b> for 3100, 3900 and Cobra Connex series antithefts.</p>
<b>IMMOBILISATION POINT</b>	<p><b>Fuel pump</b>  Cut the VIOLET wire, at the position nr.9, in the 16 way black connector, behind the left lateral bulkhead, driver's side.</p>
<b>STARTER</b>	<b>+50:</b> Cut the BLUE wire located in the wiring harness coming out of the connector of the ignition key.
<b>BONNET SWITCH</b>	Install an additional switch on the front headlamp support plate, driver's side.
<b>DOORS SWITCH</b>	<p>Connect to the LIGHT BLUE wire, at the position nr. 32, of the green connector, inside the connection with white covering, in the fuse box.</p> <p><b>Note:</b> the polarity of the lamp is positive. Invert the signal with a micro-relay.</p>
<b>BOOT SWITCH</b>	Connect to the BLACK wire, at the position nr.16, in the grey connection of the 40 way connector, in the fuse box.

**FITTING DIAGRAM NR. 194**


Diagram to make the windows locking with automatism on  
**CITROEN C3** year 2003

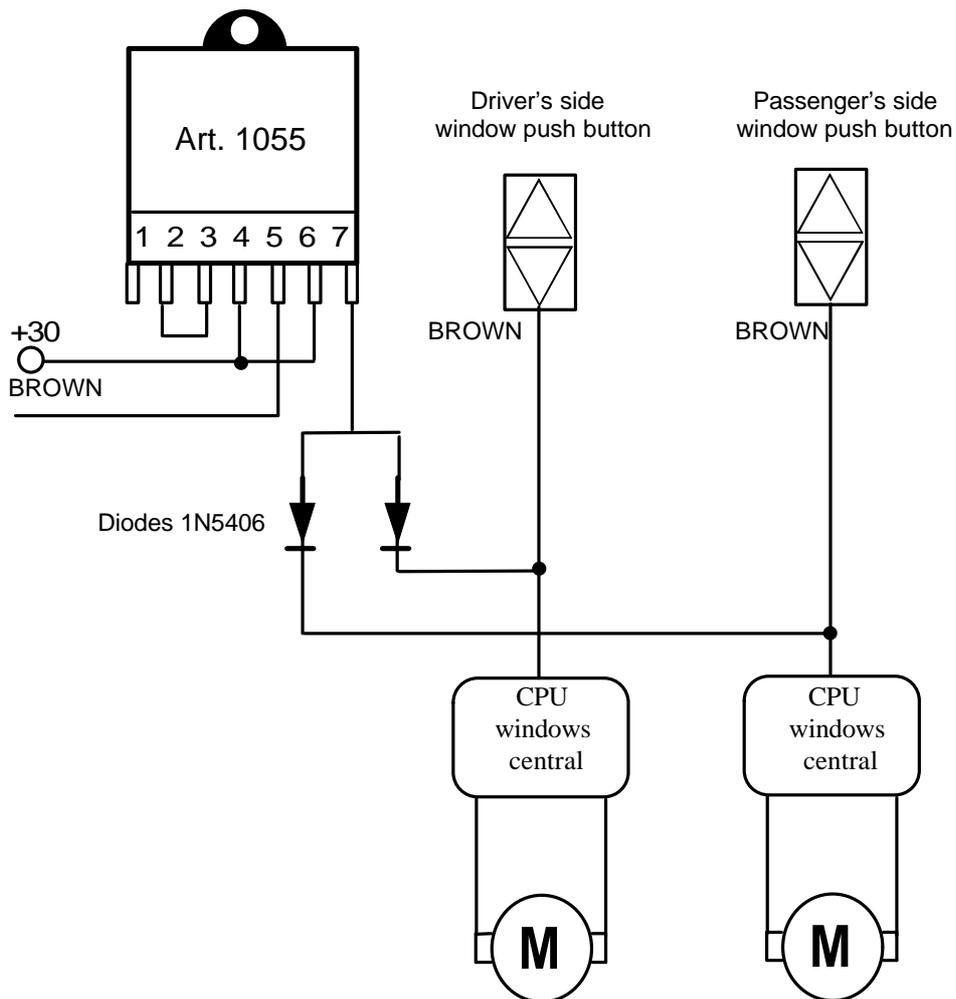

**FITTING DIAGRAM NR. 197**

Diagram to make lock/unlock of the doors  
on **CITROEN C3** year 2003

A section

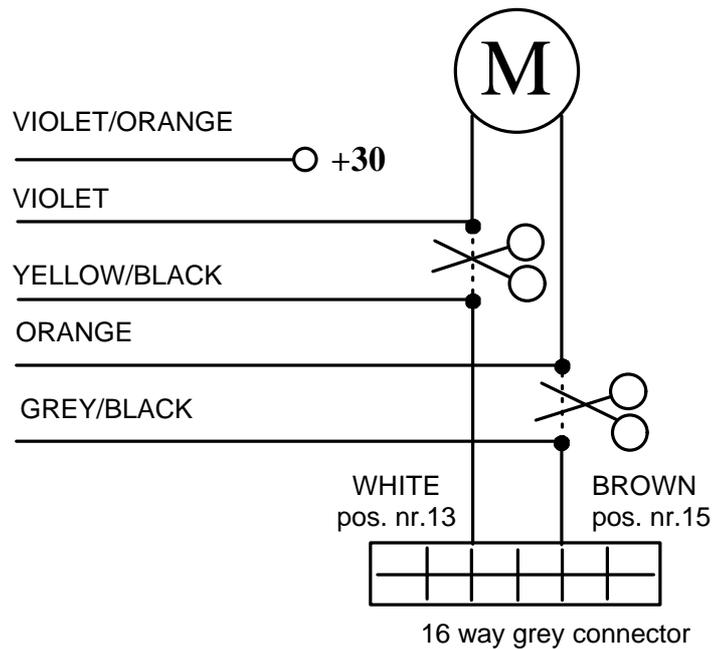

B section

