



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

MAKE

CITROEN

MOD.

C 5

YEAR.

01 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the bulkhead that divides the engine compartment and the passenger's compartment.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, on the left of the driver's side dashboard.

POWER SUPPLY

+ 30: connect to the 4 mm² RED wire located in the multiway connector, in the fuse box.

- 31: connect to the original ground wire located behind the left lateral bulkhead, driver's side.

IGNITION WIRE

+ 15/54: connect to the 1,5 mm² PINK/RED wire, at the position nr.2, in the wiring harness coming out of the 16 way green connector, in the fuse box.

DIRECTION INDICATORS

Connect to the WHITE wire, at the position nr.13 and WHITE wire, at the position nr.14, in the 16 way connector, in the fuse box.

ELECTRIC WINDOWS

Positive control signal

To make the windows locking it is necessary to act directly in the wiring harness coming out from each motor inside each door.

CENTRAL DOORS LOCKING

Door original motor direct control

Make reference to the **diagram nr. 124** for the 7900 serie antithefts. For the 3100-3900 series make reference to the **diagram nr. 124A**.

STARTER

+50: Cut the 1,5 mm² BLUE wire located in the wiring harness coming out of the ignition key.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, near the rubber trim of the bonnet.

DOORS SWITCH

Connect to the GREY wire located in the wiring harness coming out of the lamp placed in the lower part of the driver's side dashboard.

Note: the polarity of the lamp is positive.

BOOT SWITCH

Connect to the WHITE wire located in the wiring harness coming out of the rear lamp of the driver's side boot.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

FITTING DIAGRAM N°124

Diagram to make the lock and unlock of the doors on
CITROEN C 5
(for Bridge serie antithefts)

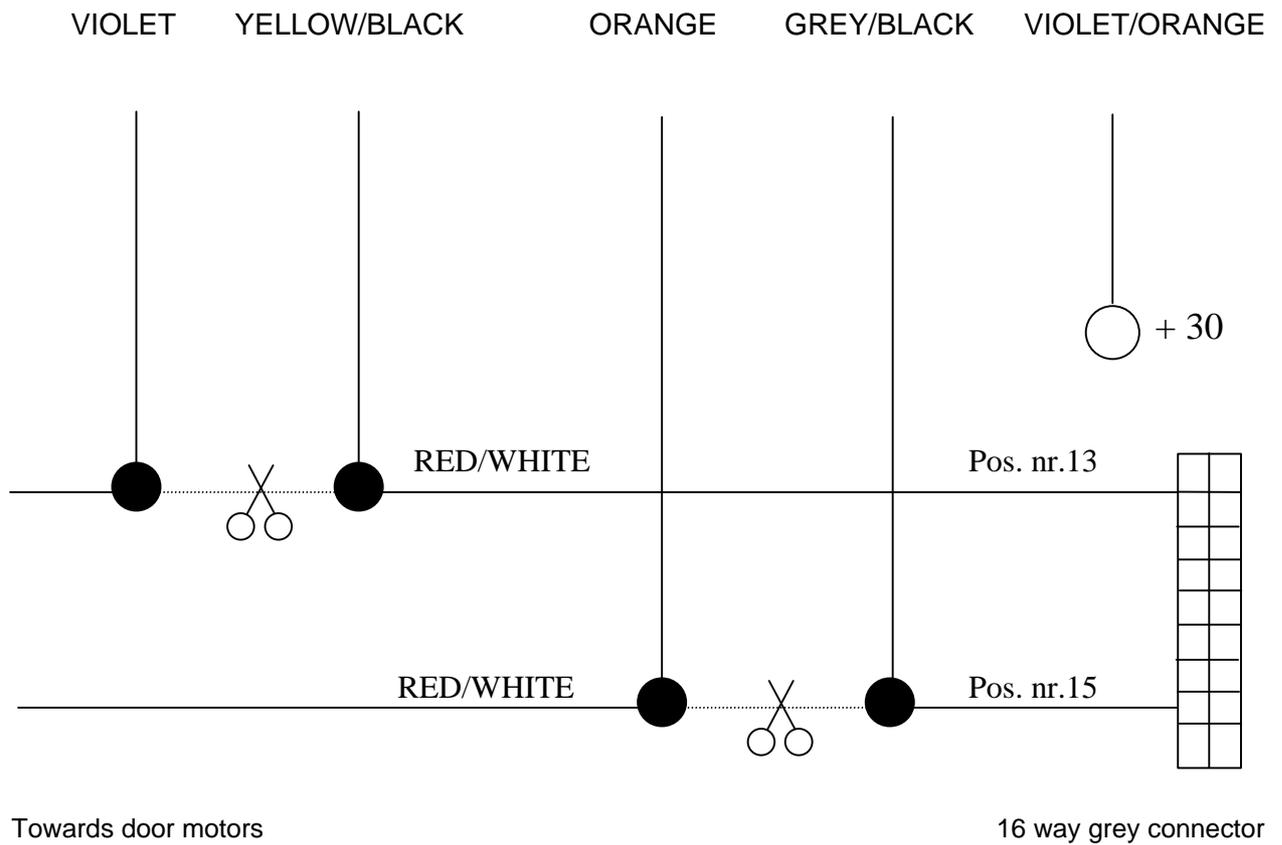



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

FITTING DIAGRAM N°124A

Diagram to make the lock and unlock of the doors on
CITROEN C 5
(for 3100 serie antithefts)

